


INSTRUCTIONS


#83-165 Stucco Patch Gun

ASSEMBLY INSTRUCTIONS

Remove wing nut and washer from the shaft of the handle.

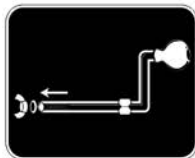

Place the shaft of the handle through the hole.

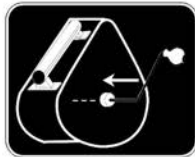

Make sure the shaft crosses through correctly and the threaded end exits on the opposite side.



Confirm that the clutch notches the shaft inside the roller.



Confirm that the shaft turns the roller.




Place the washer and screw through the wing nut on the shaft at the threaded point. Tighten the wing nut.



Place the adjustment lever on the first level.



After using, rinse with water and grease the moving parts.

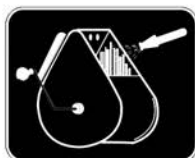

INSTRUCTIONS FOR USE

Pour 1-1/2 to 2 lbs. (1/2 to 1 kg) of material each time. Remove the pressure to roll 1 and 2 laps in the opposite direction to mix the substance. Apply pressure to roll. Start spraying the surface. Adjust the reducer cover according to your requirements.

Materials recommended for interior

Marble zero fine	White cement	Lime	Paste adhesive	
2 lb.	2 lb.			= "Streaky" Finishes
2 lb.	2 lb.	2 lb.	2 pt.	
2 lb.	1 lb.			
6 lb.	5 lb.	2 lb.	2 pt.	

Marble zero fine	Marble zero bulky	Lime	White cement	Paste adhesive	
2 lb.	2 lb.	2 lb.			= Rustic Finishes
1 lb.	1 lb.	2 lb.	2 lb.	2 pt.	
		1 lb.			
3 lb.	3 lb.	5 lb.	2 lb.	2 pt.	

Materials recommended for outside

Marble zero fine	Marble zero bulky	White cement	
2 lb.	2 lb.	2 lb.	= Mediterranean Finishes
1 lb.	1 lb.	2 lb.	
3 lb.	3 lb.	4 lb.	

Sand sifted or normal	White or gray cement	
2 lb.		= Mediterranean Finishes
2 lb.	2 lb.	
2 lb.		
6 lb.	4 lb.	

Bon[®]
Trusted since 1958