

Operator's Manual



CP9120, CP9121 & CP9122 4", 5" & 4.5" Angle Grinders



WARNING

To reduce risk of injury, everyone using, installing, repairing, maintaining, changing accessories on, or working near this tool must read and understand these instructions, as well as separately provided safety instructions part number 6159948760, before performing any such task.

CP9120, CP9121 & CP9122 Series Angle Grinder


INSTRUCTION MANUAL

Machine Type:

Power tool equipped with 3/8", 5/8" & M14 spindle with various grinding wheels for grinding - No other use is permitted.

Air Supply Requirements

1. Supply tool with 90 psig (6.3 bar) of clean, dry air. Higher pressure drastically reduces tool life.
2. Connect tool to air line using pipe, hose and fitting sizes shown in the diagram below.
3. Do not install a quick coupler directly into the sander throttle handle.

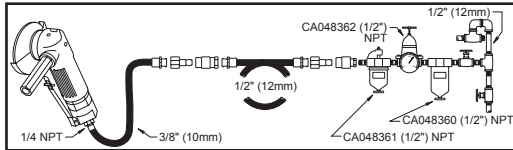

Lubrication

Use an air line lubricator with SAE #10 oil, adjusted to two drops per minute. If an air line lubricator cannot be used, add air motor oil to the inlet once a day.

Maintenance

1. Disassemble and inspect tool every three months if the tool is used every day. Replace damaged or worn parts.
2. High wear parts are underlined in the parts list.
3. To keep downtime to a minimum, the following service kits are recommended:

Tune-Up Kit:

2050504823 (Incl: 7, 8, 11, 16, 20)

Bevel Gear Kit:

2050504833 (Incl: 13, 22, 24, 27, 29, 30, 31, 32, 34)

Technical Data

CP9120CR, CP9120CRN: 3/8"-24 thread, 4" wheel

CP9121CR: 3/8"-24 thread, 5" wheel

CP9121BR: 5/8"-11 thread, 5" wheel

CP9121AR: M14 thread, 5" wheel

CP9122CR: 3/8"-24 thread, 4.5" wheel

CP9122BR: 5/8"-11 thread, 4.5" wheel

Free speed; 12,000 RPM

Power; 0.8 HP-600W

Air pressure 90 psi (6.3 bar)

Air consumption; 21 cfm (10 l/s)

Original Instructions

Copyright 2010, Chicago Pneumatic Tool Co. LLC

All rights reserved. Any unauthorized use or copying of the contents or part thereof is prohibited. This applies in particular to trademarks, model denominations, part numbers and drawings. Use only authorized parts. Any damage or malfunction caused by the use of unauthorized parts is not covered by Warranty or Product Liability.

Guard Position



Noise & Vibration Declaration*

Sound pressure level 84 dB(A), uncertainty 3 dB(A), in accordance with EN ISO 15744. For sound power, add 11 dB(A).

Vibration value;

a = 5.3m/s², uncertainty k = 1.6m/s² (CP9120CR, CP9120CRN);

a = 8.6m/s², uncertainty k = 4.6m/s² (CP9122BR);

a = 5.4m/s², uncertainty k = 1m/s² (CP9122CR);

a = 6.7m/s², uncertainty k = 2.2m/s² (CP9121AR);

a = 11.2m/s², uncertainty k = 3.4m/s² (CP9121BR);

a = 11.2m/s², uncertainty k = 3.4m/s² (CP9121CR); re. ISO 28927-1.

Declaration of noise and vibration emission

All values are current as of the date of this publication.

These declared values were obtained by laboratory type testing in accordance with the stated standards and are suitable for comparison with the declared values of other tools tested in accordance with the same standards. These declared values are not adequate for use in risk assessments and values measured in individual work places may be higher. The actual exposure values and risk of harm experienced by an individual user are unique and depend upon the way the user works, the workpiece and the workstation design, as well upon the exposure time and the physical condition of the user.

We, Chicago Pneumatic, cannot be held liable for the consequences of using the declared values, instead of values reflecting the actual exposure, in an individual risk assessment in a work place situation over which we have no control.

This tool may cause hand-arm vibration syndrome if its use is not adequately managed.