


FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.	FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	14-38-2550	Housing Kit	(1)	15e	48-54-0100	Retention Nose Piece Kit	
2		Right Housing	(1)			(Includes: 3/32", 1/8", 5/32" and 3/16"	
3		M3 Screw	(6)			Retention Nose Pieces)	(1)
4	43-72-2560	Mandrel Collector Assembly	(1)	16	43-72-2550	Nose Pieces Holder	(1)
5	45-76-2550	Mandrel Exit Tube	(1)	17	14-30-2550	Motor & Electronics Assembly	(1)
6	40-50-2550	Yoke Spring	(1)	18	14-30-2555	Gear Case Assembly	(1)
7	31-15-2550	Top Housing	(1)	19		Gear Case	(1)
8	05-81-2550	M4 x 0.7 Screw	(4)	20	45-98-0500	Yoke Assembly	(1)
9	45-22-2550	Sleeve	(1)	21	43-72-2555	Belt Clip Kit	(1)
10	40-50-2555	Jaw Pusher Spring	(1)	22		Belt Clip	(1)
11	44-60-2550	Pusher Tube Assembly	(1)	23		Screw	(1)
12	30-55-0035	Machine Jaws Kit (Set of 3)	(1)	24		Left Housing	(1)
13	43-56-2550	Guide	(1)	25	45-96-0500	Wrench	(1)
14	43-56-2555	Nose Housing	(1)	26	45-72-0205	Trigger Kit	(1)
15a	48-98-0005	3/32" Non-Retention Nose Piece	(1)	27		Trigger Spring	(1)
15b	48-98-0010	1/8" Non-Retention Nose Piece	(1)	28		Trigger	(1)
15c	48-98-0015	5/32" Non-Retention Nose Piece	(1)	29	12-20-2551	Service Nameplate (Not Shown)	(1)
15d	48-98-0020	3/16" Non-Retention Nose Piece	(1)	30	10-20-2551	Warning Label (Not Shown)	(1)

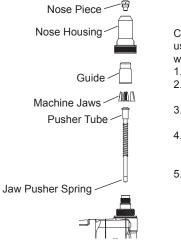

Clean and lubricate the nose of the tool after heavy use (5000 rivets) or if tool becomes contaminated with dust and debris.

1. Remove battery pack.

- 2. Remove the nose housing from the tool and the nose piece from the housing.
- 3. Remove the guide (with jaws), pusher tube, and spring from the tool.
- Clean all pieces with a dry cloth and inspect for damage. If damaged, return to a MILWAUKEE service facility for repairs.
- 5. Apply a small amount of 51-08-4290 grease to the pieces and reassemble, as shown. Ensure the jaws are properly seated in the guide.

FIG.PART NO.DESCRIPTION OF PART3149-08-4290T-Grease (14 oz.) (Not Shown)

NO. REQ. (1)