
SERVICE PARTS LIST

BULLETIN NO. 54-49-8400

REVISED BULLETIN

PACKOUT™ Rolling Tool Box Assembly SERIAL 48-22-8426 CATALOG NO. NUMBER 48-22-8426 Includes: **EXAMPLE**: $|00|_{\overline{0}}$ PACKOUT™ Large Tool Box Assembly
PACKOUT™ Medium Tool Box Assembly
PACKOUT™ Organizer Assembly
PACKOUT™ Compact Organizer Assembly
PACKOUT™ Small 10" Storage Tote
PACKOUT™ Medium 15" Storage Tote
PACKOUT™ Large 20" Storage Tote Component Parts (Small #) Are Included When Ordering The Assembly (Large #). 48-22-8435 1 2 *See page 6 thru 9 for Additional Storage Products: PACKOUT™ S-Organizer Assembly
PACKOUT™ S-Organizer Compact Assembly
PACKOUT™ Tool Box Assembly
PACKOUT™ Medium 15" Tool Bag
PACKOUT™ Large 20" Tool Bag
PACKOUT™ Tech Bag
PACKOUT™ Jobsite Backpack
PACKOUT™ Jobsite Cooler 48-22-8321 48-22-8322 2(2x) FIG. PART NO. **DESCRIPTION OF PART** NO. REQ. 43-62-8400T Retractable Handle Grip Service Kit ż (2) (1) (2) Screw 3 43-62-8400 Retractable Handle Service Assembly 43-62-8426 Side Handle Service Kit 5 3 4 (Contains 2 Side Handles and 4 Pins) (1) (4) 6 7 45-94-8426 Wheel Service Kit (Contains 2 Wheels and 2 Locking Hex Nuts) (1) Locking Hex Nut Latch Service Assembly (Set of 2) 8 44-20-8400 9 Storage Tray Lid Gasket (Not Shown) (1) (1) 10 31-01-8400 43-44-8400 12 42-12-8426 Axle Servicè Kit (Contains 1 Axle and 2 Locking Hex Nuts) (1) NOTE: See page 2 for installation Place flat blade screwdriver in instructions here and work of Retactable pin to the inside Handle (3) into tool box body. Grab exposed pin with needle nose pliers and work out. 10 6(2x) Locking Tabs As an aid to removing a damaged Latch Assembly (9), use two large flat blade screwdrivers. Push blades between parts as shown. Twist both screwdrivers at same 5 6 time to force the blades into opening and work the latch assembly over the two locking tabs. 7 8 Milwookee To install a new latch assembly, 4(2x) position entire latch assembly over locking tabs with the two top lugs partially inserted in 'catch cavity' of main housing. Engage latch bar onto lid and gently press latch lever to slide assembly over two locking tabs and into place. This removal and installation process will be the same 12 8 where other service latches are offered in this system.




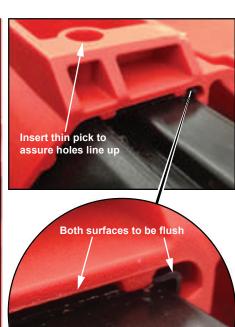



As an aid to installation, collapse the Retractable Handle Assembly (3).

Properly orient the assembly and insert both sides into tool box channels.


Holes of Retractable Handle Assembly (3) must line up with holes on the back of tool box body prior to securing with screws (4).

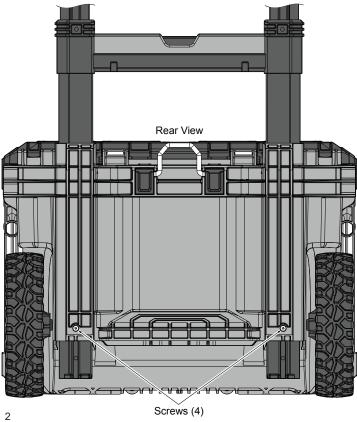

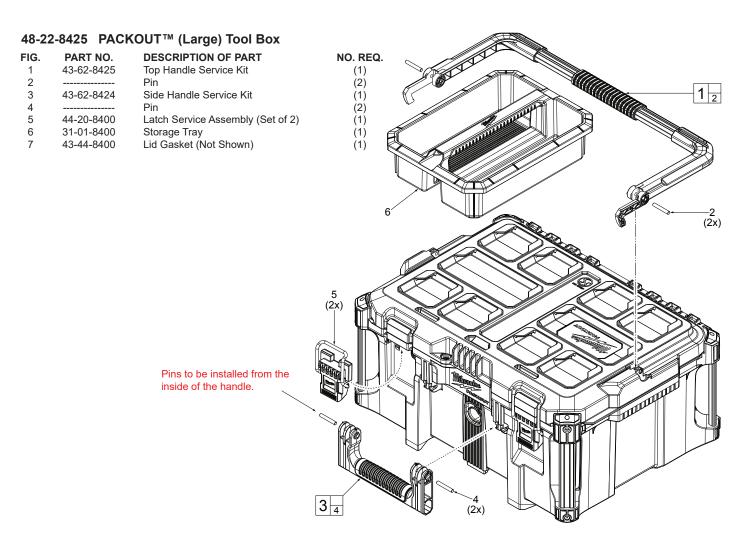

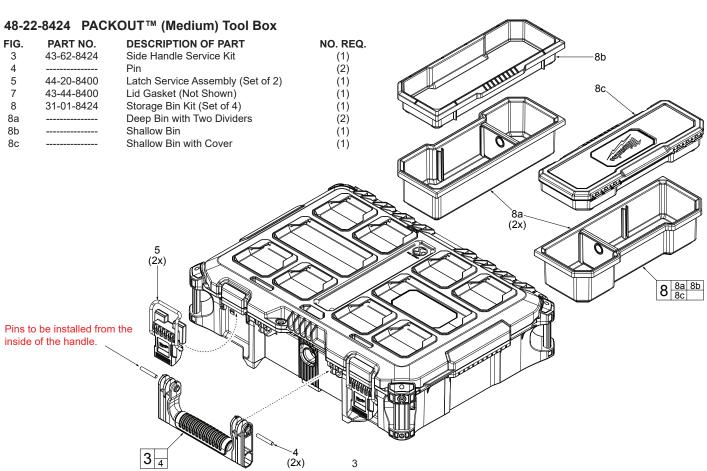


48-22-8430 PACKOUT™ Organizer

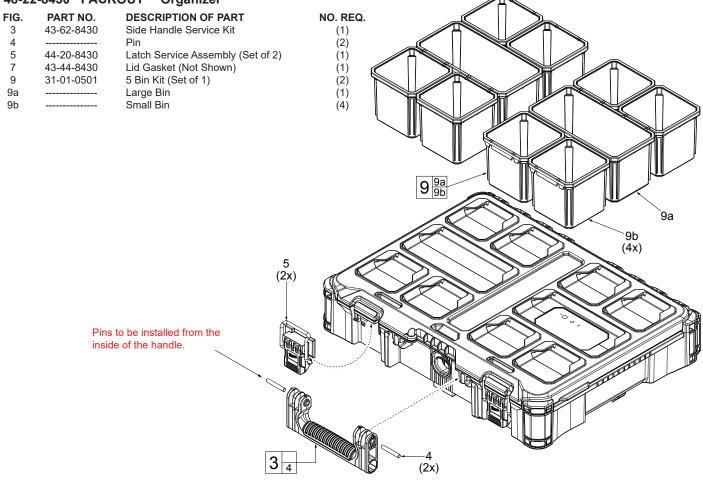

48-22-8435 PACKOUT™ Compact Organizer

FIG.	PART NO.	DESCRIPTION OF PART
3	43-62-8435	Side Handle Service Kit
4		Pin
7	43-44-8435	Lid Gasket (Not Shown)
9	31-01-0501	5 Bin Kit
9a		Large Bin
9b		Small Bin

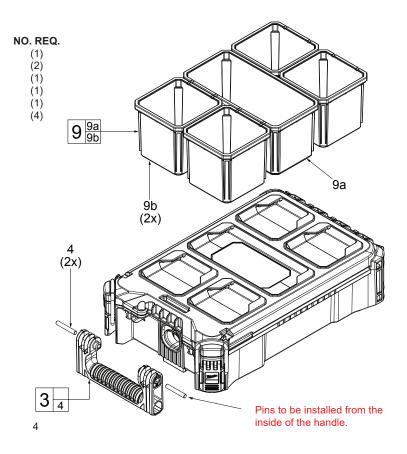

48-22-8310 10" PACKOUT™ (Small) Storage Tote 48-22-8315 15" PACKOUT™ (Medium) Storage Tote 48-22-8320 20" PACKOUT™ (Large) Storage Tote








FIG.	PART NO.	DESCRIPTION OF PART	NO. RE
1	45-56-8300	Shoulder Strap (For all three tote models)	(1)
2	44-20-8300	Locker Kit (For all three tote models)	(1)
	or		
3	44-20-0305	Locker Kit (For all three tote models)	(1)



SEE DIAGRAMS BELOW TO DETERMINE LOCKER SERVICE PART NEEDED.




To remove a damaged locker system, flip tote upside down and approach tote from the bottom of base. Insert a large flat blade screwdriver in middle of locking carriage as shown. Lightly pry carriage upward out of base opening. Remove and discard old locking carriage and spring.

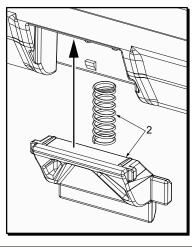


No. 44-20-8300 Locker Kit For early production PACKOUT™ Storage Totes

To install a Locker Kit (2), align spring as shown and guide the tabs of locking carriage in channels of tote base. Push locking carriage upward to snap into place.

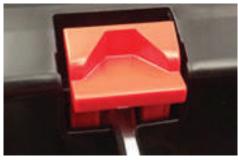


To remove a damaged locker system, flip tote over on the side and approach tote from the bottom of base. Insert a large flat blade screwdriver in middle of locking carriage as shown. Lightly pry carriage upward out of base opening. Remove and discard old locking carriage.



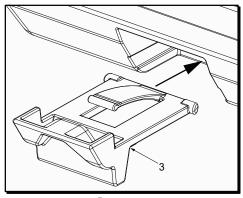


No. 44-20-0305 Locker For later production PACKOUT™ Storage Totes

To install a new Locker (3), guide the tabs of locking carriage in channels of tote base. Push locking carriage forward to snap into place.

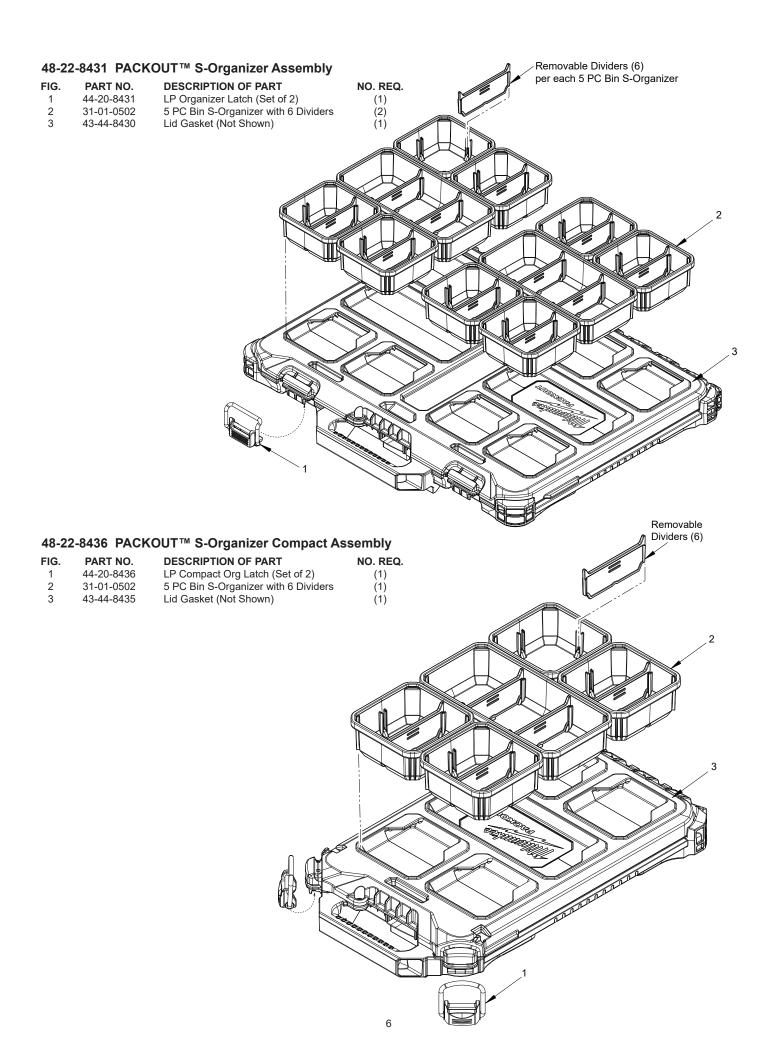


48-22-8450 PACKOUT™ Tool Box Kit with Foam Dividers

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ
1	43-62-8450	Kit Box Mono Block Handle with 2 Pins	(1)
2	44-20-8430	Latch Service Assembly (Set of 2)	(2)
3	43-44-8400	Lid Gasket (Not Shown)	(1)
4	48-22-8455	Foam Insert for PACKOUT™ Kit Box (Set of 2	2) (1)

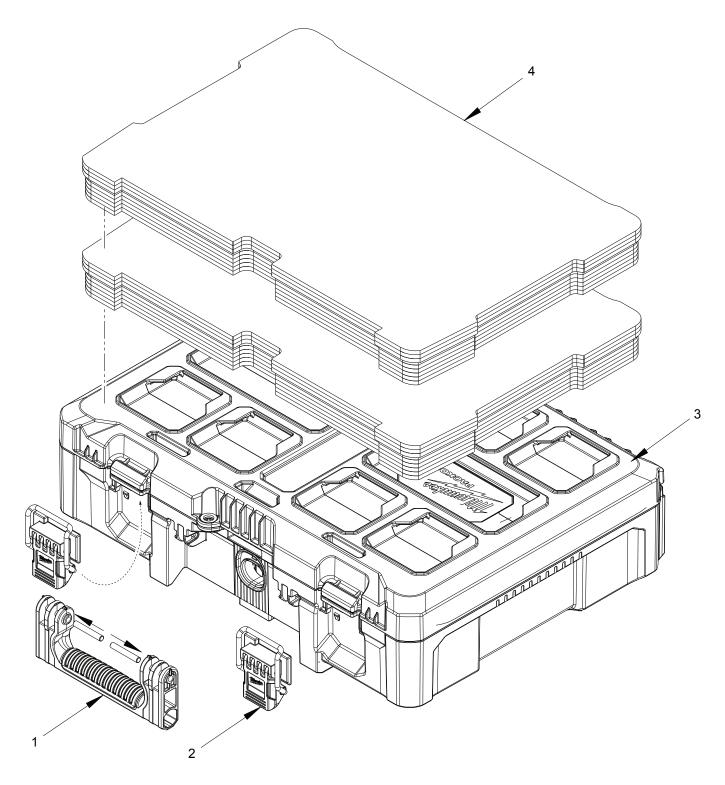

48-22-8321 15" PACKOUT™ (Medium) Tool Bag*

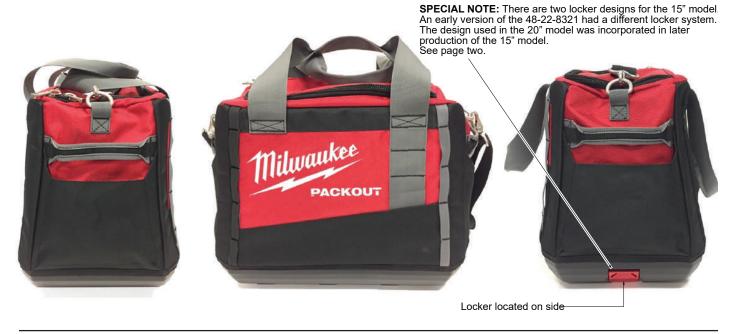

48-22-8322 20" PACKOUT™ (Large) Tool Bag*



*48-22-8321 15" PACKOUT™ (Medium) Tool Bag *48-22-8322 20" PACKOUT™ (Large) Tool Bag

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	45-56-8300	Shoulder Strap (For both tote models)	(1)
2	44-20-8300	Locker Kit (For early versions of 48-22-8	321)
		See page two	(1)
3	44-20-0305	Locker (For 48-22-8322 and later version	าร
		of 48-22-8321) See page 5	(1)

SEE PAGE 5 FOR INSTRUCTIONS ON REMOVING SELECTION AND INSTALLING BOTH LOCKER SYSTEMS



48-22-8300 PACKOUT™ Tech Bag







48-22-8301 PACKOUT™ Jobsite Backpack







48-22-8302 PACKOUT™ Jobsite Cooler







FIG.	PART NO.
1	45-56-8300
2	44-20-0305

DESCRIPTION OF PART

NO. REQ. Shoulder Strap (For Cooler & Tech Bag) Locker System

(1) (1)

SEE PAGE 5 FOR INSTRUCTIONS ON REMOVING AND INSTALLING BOTH LOCKER SYSTEMS

