

3M™ Earplugs 1100 / 1110



Affordable Comfort & Quality

Get the protection you need from the brand you can trust — at an affordable price, with the 3M 1100 and 1110 earplugs. Soft, hypoallergenic foam and a tapered design help provide a comfortable noise-reducing seal in the ear canal. 3M earplugs 1100 and 1110 are easy to roll down and are engineered for all-day comfort.


Leading the Advancement of Hearing Conservation™

3M



3M™ Earplugs 1100 / 1110

- Tapered shape designed to fit most earcanals • NRR 29 dB*
- Soft, hypoallergenic foam helps create a custom seal in the earcanal • Comfortable cloth cord on 1110 product

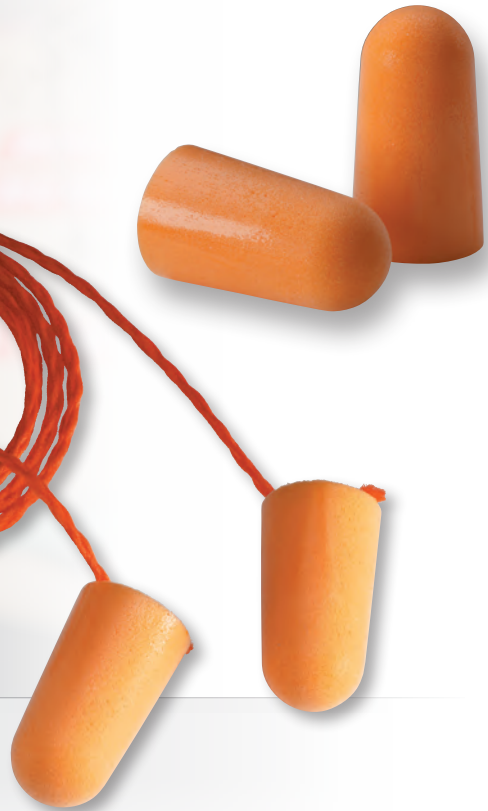

Ordering Information

3M Product Number	3M UPC Number	3M Stock ID Number	Abbreviated General Description	Case Qty	Box Qty
1100	50051138 29008 0	70-0704-0630-4	Foam Earplug 1100	1000 PR	200 PR
1110	50051138 29009 7	70-0704-0631-2	Foam Earplug 1110 Corded	500 PR	100 PR

Leading the Advancement of Hearing Conservation™



PROTECTOR TYPE

DESCRIPTION

HOW TO USE

CARE & CLEANING

Foam Plugs



Foam plugs, made from expandable slow-recovery foam, **provide the best combination of comfort and protection** for most users. They must be properly prepared for insertion. One size fits most. Once in the ear, foam plugs expand to provide a snug and secure custom fit. The two most common complaints about foam plugs ("not enough protection," and "they don't stay in") are almost always solved by greater practice and care in insertion.



Slowly roll and compress foam plugs into a very thin crease-free cylinder. While compressed, insert plug well into the ear canal. Fitting is easier if you reach around the head to pull the ear outward and upward during insertion.



Keep the plugs clean and free from material that can irritate the ear canal. They may be washed in mild liquid detergent and warm water. Squeeze excess water from the plugs and allow to fully air dry. Washing may be repeated several times. Discard plugs if they noticeably change their firmness or do not re-expand to their original size and shape.

Premolded Plugs



Premolded plugs are made from flexible materials that are preformed to fit the ear. They are generally available with a joining cord to prevent loss. Although the version pictured at the left is a one-sized product, many premolded plugs are sold in two or more sizes and must be **individually sized for each ear**. If after a period of regular wear you've been unable to get used to your earplugs, try another size, type, or brand of hearing protector.



Reach around the back of your head and pull outward and upward on the ear while inserting the plug until you **feel it sealing**. This may seem tight at first, especially if you've never worn earplugs. Carefully twist the plug to break the seal for a slow, safe removal.



Premolded plugs will normally last several months or more depending upon the type, and environmental factors. They should be replaced if they shrink or swell, harden or soften, tear, crack, or become permanently deformed. Wash them in warm soapy water and rinse well. When dry, store them in a carrying case.