



Product Information

Filter Adapter 603

The 3M™ Filter Adapter 603 is designed for use with 3M™ Particulate Filter 5N11 or 3M™ Particulate Filter 5P71 and 3M™ Filter Retainer 501.

Features

- Platform for 5N11 and 5P71 N95 and P95 prefilters.
- Enables these filters to be directly attached to all 3M™ Full or Half Facepiece 6000 and 7000 Series Respirators.

Benefits

- The filter adapter 603 may be used multiple times on all 3M full or half facepiece 6000 and 7000 series respirators.
- Provides cost-effective filtering solution when multiple filters are needed for elastomeric facepieces.
 - Break even analysis shows savings when used multiple times (based on suggested list per pair and similar replacement frequency)
 - 5N11 filters x 7 (integrating the 603 and 501 adapters)
 - 2071 disc filter x 7


You save using the 603, 501, 5N11 when you use more than 7 pairs of the 5N11

Packaging and Ordering Information


Part No.	Stock ID/UPC	Case Packaging
603	70-0707-5800-1 50051138 54376 6	2 adapters per box, 8 boxes per case

How to use the filter adapter 603

1. Align notch on edge of 603 adapter with facepiece mark, as shown, and push together.

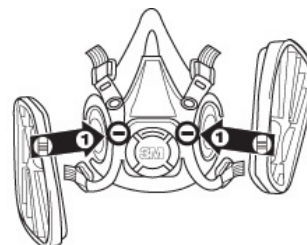

2. Turn adapter ¼ turn clockwise to stop. To remove adapter, turn ¼ turn counter-clockwise.

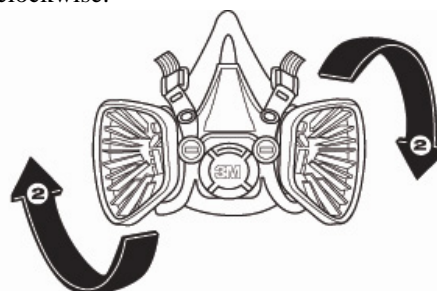

3. Place filter into retainer (Part No. 501) with filter printing facing towards the 603 adapter. Snap together and ensure the filter seal is free from creases or gaps.

