# ATD-8198 MADE IN MEXICO BASIC HEAVY DUTY REEL



#### **BASIC HEAVY DUTY REEL SYSTEM:**

Suitable for Oil Hose ½" or Grease Hose ½" up to 50 ft Maximum Operating Pressure: 7500 PSI

Width of Drum: 6.0" (15.2CM)

1/2" NPT(f) Inlet and Outlet Connections

#### **OWNERS MANUAL**

RETAIN THIS MANUAL FOR FUTURE REFERENCE TO IMPORTANT WARNINGS AND OPERATING AND MAINTENANCE INSTRUCTIONS.

PROPER USE AND MAINTENANCE OF THIS EQUIPMENT IS THE RESPONSIBILITY OF THE OWNER AND/OR OPERATOR.

# DO NOT USE THIS EQUIPMENT UNLESS YOU HAVE CAREFULLY READ AND UNDERSTAND THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL.

### ! WARNING!

**NEVER** exceed the stated maximum working pressure of the pump or of the lowest rated component in your system.

**NEVER** modify any part of this equipment.

**NEVER** use combustible gas with this equipment.

**NEVER** attempt repairs while the system is under pressure.

**NEVER** attempt to disassemble the equipment while the system is under pressure.

**ALWAYS** tighten fluid connections before using this equipment

**ALWAYS** read/follow the fluid manufacturer's recommendations regarding fluid compatibility.

**ALWAYS** read/follow the fluid manufacturer's recommendations regarding the use of protective clothing and equipment.


**REGULARLY** check all equipment and repair/replace worn or damaged parts immediately.


FAILURE TO HEED THESE WARNINGS INCLUDING OVERPRESSURIZING, ALTERING PARTS, USE OF INCOMPATIBLE FLUIDS, MISUSE, OR USE OF DAMAGED/WORN PARTS MAY RESULT IN EQUIPMENT DAMAGE, PROPERTY DAMAGE, FIRE, EXPLOSION AND/OR SERIOUS PERSONAL INJURY.

#### SAFETY INSTRUCTIONS


Extreme caution should be used when operating this equipment as it generates very high fluid pressure. Leaks from loose or ruptured components or material from dispensing valve can inject fluid through the skin causing serious bodily injury and possible need for amputation. Always wear protection to prevent material splashing onto skin or into eyes.


<u>IMPORTANT:</u> GET EMERGENCY MEDICAL CARE IMMEDIATELY IF ANY FLUID APPEARS TO PENETRATE THE SKIN! INFORM PHYSICIAN OF EXACTLY WHAT WAS INJECTED. PLEASE DO NOT TREAT THIS INJURY AS A SIMPLE CUT.

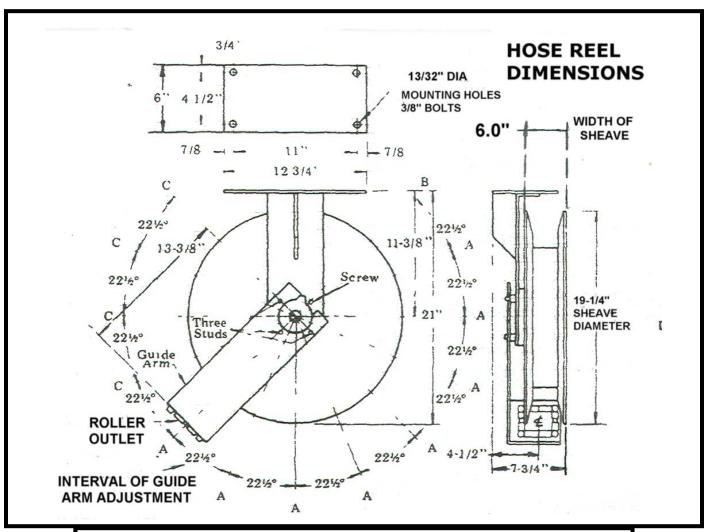


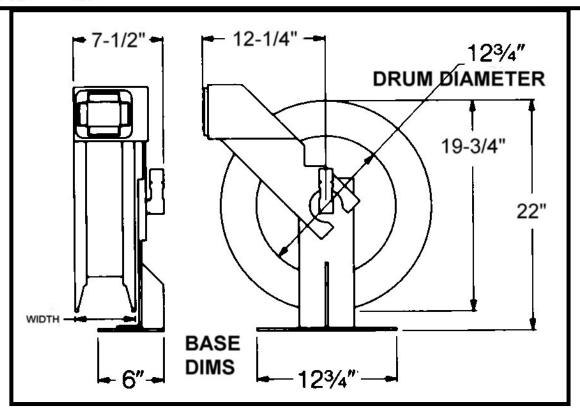



## REEL / HOSE TRACK POSITIONS

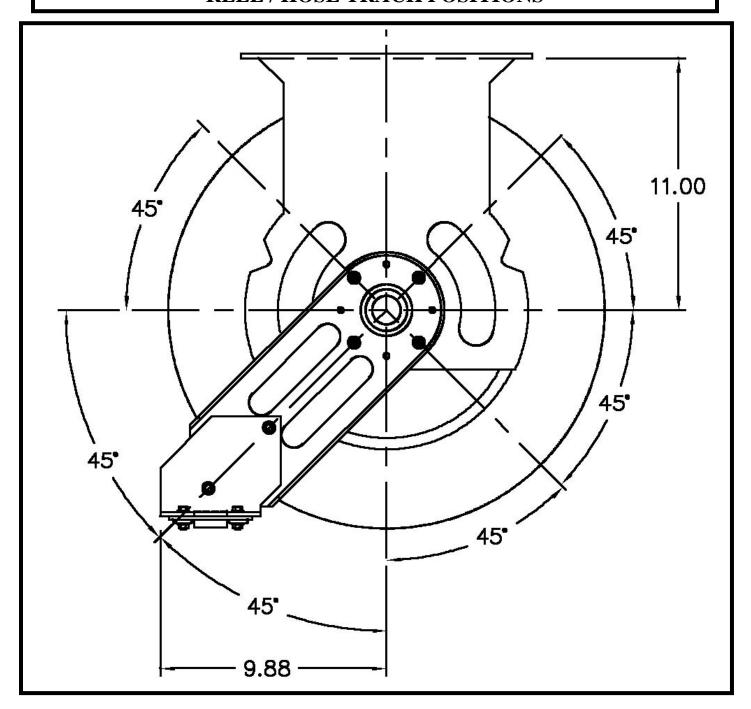


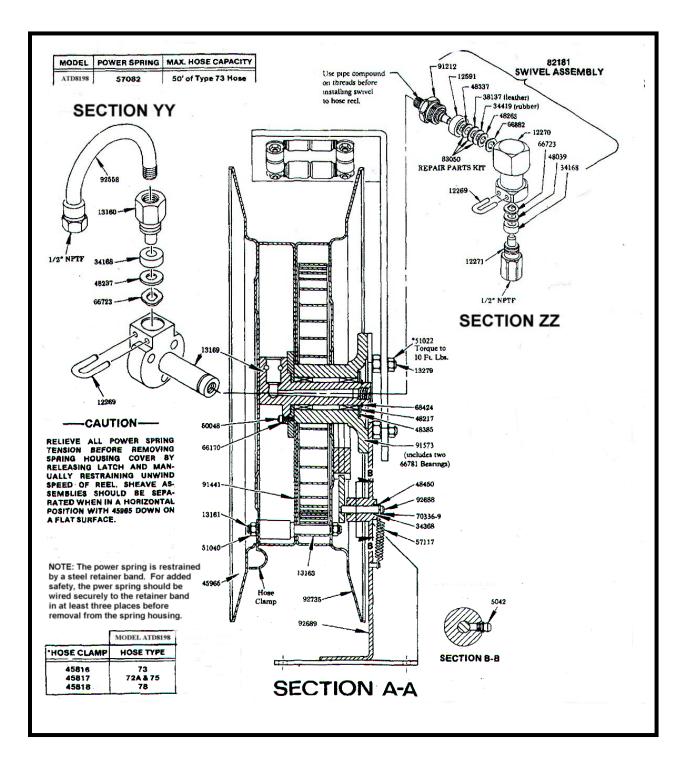


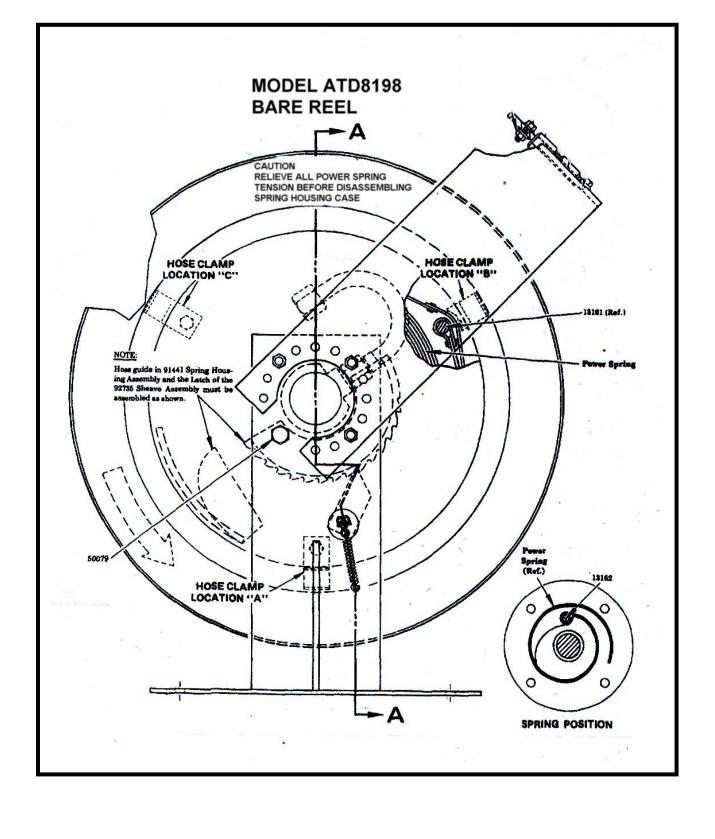

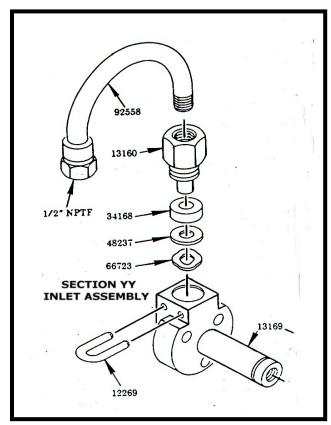

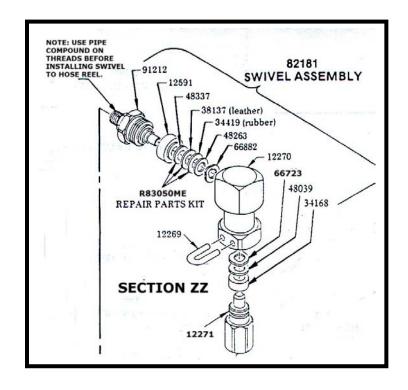

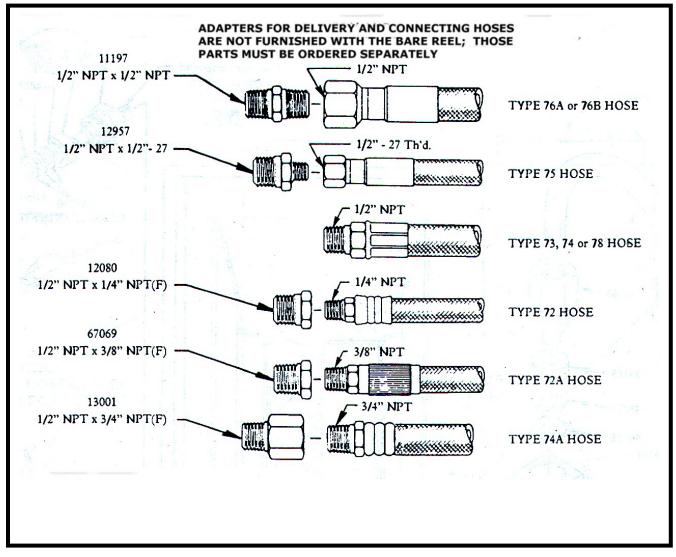

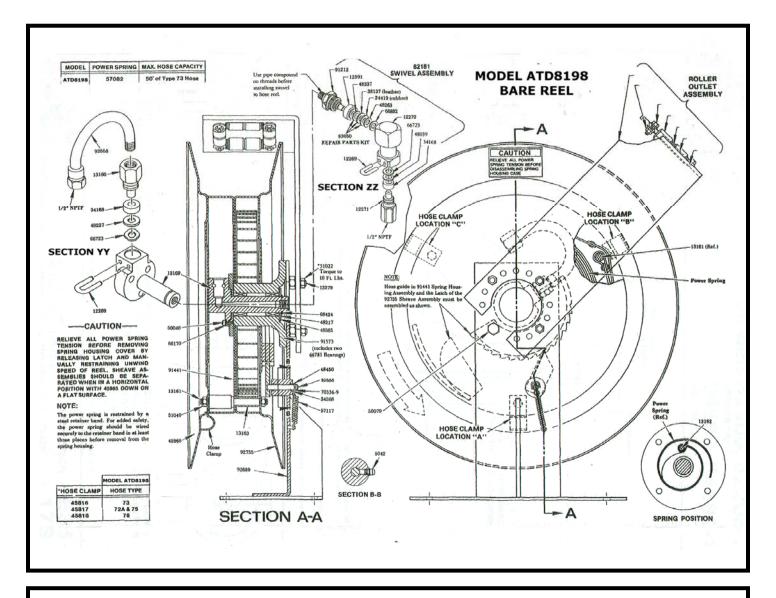

Warning: Use Extreme Caution when working on the Reel Spring. Consider the spring very dangerous.

**Caution Note**: Relieve all power spring tension before removing spring house cover by releasing latch and manually restraining unwind speed of reel. Sheave assemblies should be separated when in a horizontal position with 45965 down on a flat surface.

**Caution Note**: The power spring is restrained by a steel retainer band. For added safety the power spring should be wire securely to the retainer band in at least three (3) places before removal from the spring housing.


Note: Use Pipe Compound on Threads before installing swivel on Hose Reel.

### ATD-8198 SERVICE PARTS LISTING AND DESCRIPTION


PART	QTY	DESCRIPTION	PART	QTY		DESCRIPTION
5042	1	LUBE FITTING	48385		4	SHIM WASHER
12269	2	KEEPER	48450		1	WASHER
12270	1	SWIVEL BODY	50048		3	SCREW
12271	1	ADAPTER	50079		1	SCREW
12591	1	RETAINER	50757		4	BOLT
13160	1	ADAPTER(12271ME)	51022		3	NUT
13161	3	STUD	51040		6	NUT
13162	1	SPRING PIN	51412		4	NUT
13163	3	SPACER	57117		1	SPRING
13169	1	SHAFT	66170		3	LOCKWASHER
13272	8	ROLLER	66723		2	SPRING WASHER
13273	2	PIN	66781		2	BEARING
13274	2	PIN	66882		1	SPRING WASHER
13275	2	SPACER	68424		1	RETAINING RING
13279	3	STUD	70336-9		1	COTTER PIN
34168	2	PACKING	82181		1	SWIVEL ASSEMBLY
34368	2	O-RING	82860		1	ROLLER OUTLET ASSEMBLY
34419	1	PACKING (RUBBER)THICK	91212		1	SWIVEL STUD
38137	1	PACKING (LEATHER)REPLACED BY 34419ME THICK	91441		1	SPRING HOUSING
45965	1	SHEAVE HALF	91573		1	ARBOR
48039	1	WASHER	92558		1	TUBE & ADAPTER
48217	1	WASHER	92668		1	PAWL
48237	1	WASHER(35039ME)	92689		1	SUPPORT ASSEMBLY
48263	1	WASHER	92735		1	SHEAVE
48337	1	WASHER	360209		1	ROLLER SUPPORT ARM

Repair Kit for Soft Parts: 83050ME; consisting of: 48337ME(Metal Washer), 34419ME(1)(Rubber Packing) or(34419ME-THIN 2PCS RUBBER PACKING); 48263ME(Thin Metal Washer); 66882ME Wave Spring Washer; Note: Item 38137ME (Leather Washer) has been replaced by 34419ME (Rubber Washer)

### REF: Threading Hose onto Reels: Please note pictorial below:

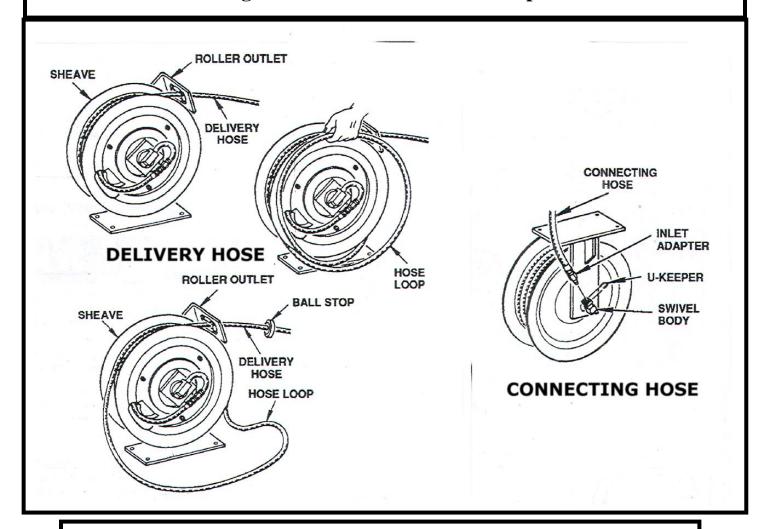

### **ATD-8198; REEL MOUNTING SUGGESTIONS**

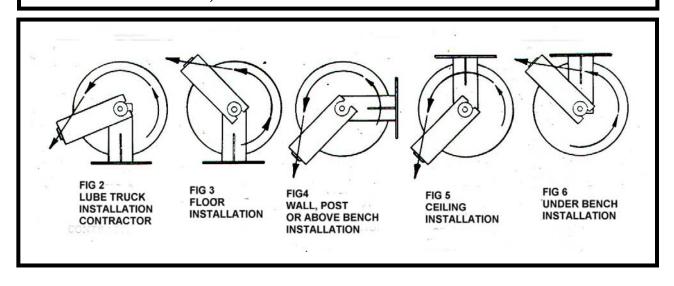

#### **ATD8198**

**DESCRIPTION: Heavy Duty High Pressure Reel Assembly** 

**Heavy Duty Basic Reel:** Includes Swivel on the Reel; No Delivery Hose; No Connecting Hose; No Control Valve; Hose Connections: 1/2"NPT(f);

**Additional Information and Specifications:** Heavy Duty Reel for Grease, Oil, Antifreeze, Water, Air with steel rollers and Heavy Steel Mounting Base. **Specifications:** 

Type: High Pressure: 7500 PSI Inlet / Outlet: 1/2"(1.27CM)

Sheath Width Outside to Outside: 6-1/2" (approx)16.5CM) Sheath Width Indiside to Inside: 6.0" (approx)(15.2CM)

Sheath Depth: 4.0"(10.2CM)
Diameter of Sheath: 20"(50.8CM)
Base: 12-3/4"(32.4CM) x 6"(15.24CM)

Base Thickness: 1/4" Plate Steel with 4 3/8"(11.1CM) DIA mounting holes for

easy mounting of the base to any support column, rafter or floor

Length of Arm: 15"(38.1CM)

Solid Metal Rollers with a diameter of: 2-1/8"(5.4CM) x 2-1/8"(5.4CM)

Applications: Grease, Oil, ATF, Antifreeze, Water, Air Carries Hose: SAE 100R2 75 50 FT(15.2mtrs)

SAE 100R2 76A 50 FT(15.2mtrs) SAE 100R2 76B 50 FT(15.2mtrs) SAE100R3 73 50 FT(15.2mtrs) SAE100R1 78 50 FT(15.2mtrs) SAE 100R3 74A 40 FT((12.2mtrs) SAE100R6 72 50 FT(15.2mtrs)

BOX Weight: 70LBS(31.8KG)

**BOX Dimensions:** 24" x 24" x 16" (61cm x 61cm x 40.6cm)

Application: Installed Lube in Garage, Maintenance Facility, Quick Lube,

Industrial, Factory



