

PROFESSIONAL PRESSURE WASHER

INSTRUCTION MANUAL



IMPORTANT: Please make certain that the person who is to use this equipment carefully reads and understands these instructions before operating.

SAVE THIS MANUAL FOR FUTURE REFERENCE

SAFETY GUIDELINES - DEFINITIONS

This manual contains information that is important for you to know and understand. This information relates to protecting YOUR SAFETY and PREVENTING EQUIPMENT PROBLEMS. To help you recognize this information, we use the symbols below. Please read the manual and pay attention to these symbols.

⚠ **DANGER:** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

<u>^</u>WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION: Indicates a potentially hazardous situation which, if not avoided, **may** result in **minor or moderate injury**.

NOTICE: Indicates a practice **not related to personal injury** which, if not avoided, **may** result in **property damage**.

IMPORTANT SAFETY INSTRUCTIONS

⚠ DANGER: Carbon Monoxide. Using an engine indoors can kill you in minutes. Engine exhaust contains high levels of carbon monoxide (CO), a poisonous gas you cannot see or smell. You may be breathing CO even if you do not smell engine exhaust.

- NEVER use an engine inside homes, garages, crawlspaces or other partly enclosed areas. Deadly levels of carbon monoxide can build up in these areas. Using a fan or opening windows and doors does NOT supply enough fresh air.
- ONLY use outdoors and far away from open windows, doors and vents. These
 openings can pull in engine exhaust.
- Even when the engine is used correctly, CO may leak into your home. ALWAYS use
 a battery-powered or battery backup CO alarm in your house. Read and follow all
 directions for CO alarm before using. If you feel sick, dizzy or weak at anytime,
 move to fresh air immediately. See a doctor. You could have carbon monoxide
 poisoning.

<u>∧</u> **WARNING:** Do not operate this unit until you read this instruction manual and the engine instruction manual for safety, operation and maintenance instructions.

 \triangle DANGER: Risk of injection or severe injury. Keep clear of nozzle. Do not direct discharge stream at persons or live animals. This product is to be used only by trained operators.

△WARNING: This product and its exhaust contain chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. In addition, some cleaning products and dust contain chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Wash hands after handling.

⚠ WARNING: This product may not be equipped with a spark-arresting muffler. If the product is not equipped and will be used around flammable materials or on land covered with materials such as agricultural crops, forest, brush, grass or other similar items, then an approved spark arrester must be installed and is legally required in the state of California. It is a violation of California statutes section 130050 and/or sections 4442 and 4443 of the California Public Resources Code, unless the engine is equipped with a spark arrester, as defined in section 4442, and maintained in effective working order. Spark arresters are also required on some U.S. Forest Service land and may also be legally required under other statutes and ordinances.

SAVE THESE INSTRUCTIONS

1 1/200

⚠ DANGER: RISK OF EXPLOSION OR FIRE		
WHAT CAN HAPPEN	HOW TO PREVENT IT	
 Spilled gasoline and it's vapors can become ignited from cigarette sparks, electrical arcing, exhaust gases and hot engine components such as the muffler. 	adding fuel to the tank.	
 Heat will expand fuel in the tank which could result in spillage and possible fire explosion. 	below bottom of filler neck to allow for expansion.	
 Operating the pressure washer in an explosive environment could result in a fire. 	ventilated areas free from obstructions. Equip areas with fire extinguisher suitable for gasoline fires.	
 Materials placed against or near the pressure washer can interfere with its proper ventilation features causing overheating and possible ignition of the materials. 	containing dry brush or weeds.	
 Muffler exhaust heat can damage painted surfaces, melt any material sensitive to heat (such as siding, plastic, rubber, vinyl or the pressure hose, itself), and damage live plants. 	, , ,	
 Improperly stored fuel could lead to accidental ignition. Fuel improperly secured could get into the hands of children or other unqualified persons. 	er, in a secure location away from work	
 Use of acids, toxic or corrosive chemicals, poisons, insecticides, or any kind of flammable solvent with this product could result in serious injury or death. 		



↑ DANGER: RISK TO BREATHING (ASPHYXIATION)

WHAT CAN HAPPEN

Breathing exhaust fumes will cause serious injury or death! Engine exhaust contains carbon monoxide, an odorless and deadly gas.

HOW TO PREVENT IT

- Operate pressure washer in a well-ventilated area. Avoid enclosed areas such as garages, basements, etc.
- Never operate unit in or near a location occupied by humans or animals.
- Some cleaning fluids contain substances which could cause injury to skin, eyes or lungs.
- Use only cleaning fluids specifically recommended for high pressure washers. Follow manufacturers recommendations. Do not use chlorine bleach or any other corrosive compound.



⚠ DANGER: RISK OF FLUID INJECTION AND LACERATION

WHAT CAN HAPPEN

HOW TO PREVENT IT

- Your pressure washer operates at fluid pressures and velocities high enough to penetrate human and animal flesh which could result in amputation or other serious injury. Leaks caused by loose fittings or worn or damaged hoses can result in injection injuries. DO NOT TREAT FLUID INJECTION AS A SIMPLE CUT! See a physician immediately!
- Inspect the high pressure hose regularly. Replace the hose immediately if it is damaged, worn, has melted from contacting the engine, or shows any signs of cracks, bubbles, pinholes, or other leakage. Never grasp a high pressure hose that is leaking or damaged.
 - Never touch, grasp or attempt to cover a pinhole or similar water leak on the high pressure hose. The stream of water IS under high pressure and WILL penetrate skin.
 - Never place hands in front of nozzle.
 - Direct spray away from self and others.
 - Make sure hose and fittings are tightened and in good condition. Never hold onto the hose or fittings during operation.
 - Do not allow hose to contact muffler.
 - Never attach or remove wand or hose fittings while system is pressurized.
 - When using replacement lances or guns with this pressure washer, DO NOT use a lance and/or lance/gun combination that is shorter in length than what was provided with this pressure washer as measured from the nozzle end of the lance to the gun trigger.
- Injuries can result if system pressure is not reduced before attempting maintenance or disassembly.
- To relieve system pressure, shut off engine, turn off water supply and pull gun trigger until water stops flowing.
 - Use only accessories rated equal to or higher than the rating of the pressure washer.



▲ DANGER: RISK OF INJURY FROM SPRAY

WHAT CAN HAPPEN	HOW TO PREVENT IT
 High-velocity fluid spray can cause objects to break, projecting particles at high speed. 	Always wear ANSI-approved Z87.1 safety glasses. Wear protective clothing to protect against accidental spraying.
an mg map a con	Never point wand at or spray people or animals.
 Light or unsecured objects can become hazardous projectiles. 	 Always secure trigger lock when wand is not in service to prevent accidental operation. Never permanently secure trigger in pull- back (open) position.
K	SK OF UNSAFE OPERATION
WHAT CAN HAPPEN	HOW TO PREVENT IT
Unsafe operation of your pressure washer could lead to serious injury or death to you or others.	Do not use chlorine bleach or any other
If proper starting procedure is not followed, engine can kickback causing serious hand and arm injury.	If engine does not start after two pulls, squeeze trigger of gun to relieve pump pressure. Pull starter cord slowly until resistance is felt. Then pull cord rapidly to avoid kickback and prevent hand or arm injury.
The spray gun/wand is a powerful cleaning tool that could look like a toy to a child.	Keep children away from the pressure
Reactive force of spray will cause gun/ wand to kickback, and could cause the operator to slip or fall or misdirect the spray. Improper control of gun/ wand can result in injuries to self and others.	 support. Do not use pressure washer while standing on a ladder.



trailers.

DANGER: RISK OF INJURY OR PROPERTY DAMAGE WHEN TRANSPORTING OR STORING

WHAT CAN HAPPEN

Fuel or oil can leak or spill and could result in fire or breathing hazard. Serious injury or death can result. Fuel or oil leaks will damage carpet, paint or other surfaces in vehicles or

· Oil could fill the cylinder and damage the engine if the unit is not stored or transported in an upright position.

HOW TO PREVENT IT

- If pressure washer is equipped with a fuel shut-off valve, turn the valve to the OFF position before transporting to avoid fuel leaks. If pressure washer is not equipped with a fuel shut-off valve, drain the fuel from tank before transporting. Only transport fuel in an OSHA-approved container.
- Always place pressure washer on a protective mat when transporting to protect against damage to vehicle from leaks.
- Always transport and store unit in an upright position. Remove pressure washer from vehicle immediately upon arrival at vour destination.



↑ DANGER: RISK OF ELECTRICAL SHOCK

WHAT CAN HAPPEN

HOW TO PREVENT IT

Spray directed at electrical outlets or • switches, or objects connected to an electrical circuit, could result in a fatal electrical shock.

Unplug any electrically operated product before attempting to clean it. Direct spray away from electric outlets and switches.



↑ DANGER: RISK OF CHEMICAL BURN

WHAT CAN HAPPEN Use of acids, toxic or corrosive

HOW TO PREVENT IT

- chemicals, poisons, insecticides, or any kind of flammable solvent with this product could result in serious injury or death.
- Do not spray acids, gasoline, kerosene, or any other flammable materials with this product. Use only household detergents, cleaners and degreasers recommended for use with pressure washers.
- Wear protective clothing to protect eyes and skin from contact with sprayed materials.



↑ WARNING: RISK OF BURSTING		
WHAT CAN HAPPEN	HOW TO PREVENT IT	
Over inflation of tires could result in serious injury and property damage.	Use a tire pressure gauge to check the tires pressure before each use and while inflating tires; see the tire sidewall for the correct tire pressure. NOTE: Air tanks, compressors and similar equipment used to inflate tires can fill small tires similar to these very rapidly. Adjust pressure regulator on air supply to no more than the rating of the tire pressure. Add air in small increments and frequently use the tire gauge to prevent over inflation.	
High-velocity fluid spray directed at pneumatic tire sidewalls (such as found on automobiles, trailers and the like) could damage the sidewall resulting in serious injury.	On pressure washers rated above 1600 PSI (11032 kPa) use the widest fan spray (40° nozzle) and keep the spray a minimum of 8" (20 cm) from the pneumatic tire sidewall. Do not aim spray directly at the joint between the tire and rim.	

		WARNING: RISK OF HOT SURFACES		
WHAT CAN HAPPEN			HOW TO PREVENT IT	
	•	Contact with hot surfaces, such as	•	During operation, touch only the control
		engine exhaust components, could result in serious burn.		surfaces of the pressure washer. Keep children away from the pressure washer at all times. They may not be able to recognize the hazards of this product.



⚠ WARNING: RISK OF INJURY FROM LIFTING		
WHAT CAN HAPPEN	HOW TO PREVENT IT	
 Serious injury and property damage can result from lifting heavy machines by hand. 	Do not lift heavy machines by hand.	
 Serious injury and property damage can result from lifting machines with ropes, straps, chains, or other lifting devices without factory installed lifting lugs or eyelets. 	• If your machine is not equipped with factory installed lifting lugs or eyelets, contact your dealer to purchase and install optional lifting lug kit, then refer to lifting instructions insert for proper lifting procedure.	
 Serious injury and property damage can result from incorrect use of factory installed lifting lugs or eyelets when lifting machines. 	If your machine is equipped with factory installed lifting lugs or eyelets, refer to lifting instructions insert for proper lifting procedure.	

SAVE THESE INSTRUCTIONS FOR FUTURE USE

GET TO KNOW THE PRESSURE WASHER

NOTE: Photographs and line drawings used in this manual are for reference only and do not represent a specific model.

Compare the illustrations with your unit to familiarize yourself with the location of various controls and adjustments. Save this manual for future reference.

BASIC ELEMENTS OF A PUMP

Refer to the pump manufacturer's instructions for more information.

NOTICE: The high-pressure pump was filled with oil at the factory. Always check oil level before using. Refer to pump manufacturer for maintenance instructions.

NOTICE: The high-pressure pump is shipped with a shipping plug. Before use remove the shipping plug and replace with supplied dipstick.

BASIC ELEMENTS OF THE GEAR BOX (if equipped)

Refer to the gear box manufacturer's instructions for more information.

NOTICE: The gear box is shipped with a shipping plug. Before use remove the shipping plug and replace with supplied dipstick/breather cap.

NOTICE: The gearbox was filled with lube at the factory. Always check lube level before using. Refer to gear box manufacturer for maintenance instructions.

BASIC ELEMENTS OF AN ENGINE

Refer to the Engine Owner's Manual for location and operation of engine controls.

NOTICE: The engine is shipped without oil. Before starting engine, add the oil provided. Damage to the engine will occur if the engine is run without oil, this damage will not be covered under warranty.

ASSEMBLY INSTRUCTIONS (FIG. 2)

- 1. Locate and remove all loose parts from the carton.
- Remove the colored quick-connect or MEG nozzles (if included) from the
 plastic manual bag and insert them into correct grommet on the nozzle
 holder (if equipped). Quick connect nozzles are color coded and will
 match the nozzle holder label.
- 3. Connect wand to gun and tighten securely.
- 4. Attach high pressure hose to gun and tighten securely.

NOTICE: The engine is shipped without oil. Before starting engine, add the provided oil. Damage to the engine will occur if the engine is run without oil. This damage will not be covered under warranty.

NOTICE: The high-pressure pump was filled with oil at the factory. Always check oil level before using (refer to **Maintenance** for more information).

IF EQUIPPED WITH ELECTRIC START

- 1. Place the battery into the battery box. **NOTE:** Battery is not supplied, purchase a 12V garden tractor battery with an ampere rating of at least 18 AH.
- 2. Make sure the battery boots are on the battery cables before connecting to battery.
 - a. Connect the positive (red) battery cable to the positive (+) battery terminal. IMPORTANT: ALWAYS CONNECT THE POSITIVE (RED) CABLE BEFORE CONNECTING THE NEGATIVE (BLACK) CABLE. NEVER CONNECT THE NEGATIVE (BLACK) CABLE FIRST.
 - **b.** Connect the negative (black) battery cable to the negative (-) battery terminal.
 - **c.** Grease the battery terminals and cable ends.
 - Slide the batter boots over the battery terminals.

OPERATION

PRESSURE WASHER TERMINOLOGY

PSI: Pounds per Square Inch. The unit of measure for water pressure. Also used for air pressure, hydraulic pressure, etc.

GPM: Gallons per Minute. The unit of measure for the flow rate of water.

CU: Cleaning Units. GPM multiplied by PSI equals CU.

Bypass Mode: Allows water to re-circulate within the pump when the gun trigger is not pulled. This feature allows the operator to release the trigger gun and reposition themselves without having to turn the engine off in between cleaning actions.

⚠ WARNING: Do not allow the unit to run for more than two minutes without the gun trigger being pulled. This could cause overheating and damage to the pump. When the temperature inside the pump rises too high, the thermal relief valve will open and release a spray of water from the pump to lower the internal temperature. The valve will then close.

Thermal Relief Valve (P, Fig. 3): When the temperature inside the pump rises too high, this valve will open and release a gush of water in an effort to lower the temperature inside the pump. The valve will then close.

Detergent Injection System: Mixes cleaners or cleaning solvents with the water to improve cleaning effectiveness.

Water Supply: All pressure washers must have a source of water.

The minimum requirements for a water supply are 20 PSI and 5 Gallons Per Minute. If your water source is a well, the garden hose length can only be 30 ft. (9 m) max.

<u>MARNING</u>: To reduce the possibility of contamination always protect against backflow when connected to a potable water system.

PRESSURE WASHER OPERATING FEATURES

PRESSURE ADJUSTMENTS (FIG. 4)

The pressure setting is preset at the factory to achieve optimum pressure and cleaning. If you need to lower the pressure, it can be accomplished by these methods.

- 1. Back away from the surface to be cleaned. The further away you are, the less the pressure will be on the surface to be cleaned.
- 2. Change to the 40° nozzle (white). This nozzle delivers a less powerful stream of water and a wider spray pattern. Refer to How To Use Spray Wand.
- 3. This pressure washer's high pressure pump is equipped with an additional feature that allows the pressure setting to be adjusted.

To lower the pressure, turn the pressure control knob on the pump counterclockwise to the desired pressure.

To return the pump pressure to the factory setting, turn the pressure control knob on the pump clockwise until it stops.



NOTICE: DO NOT overtighten the pressure control knob, if overtightened the knob COULD break and result in immediate loss of water pressure and costly repairs to the unit.

HOW TO USE SPRAY WAND

The nozzles for the spray wand are stored in the nozzle holder on the panel assembly. Colors on the panel identify nozzle location and spray pattern. Refer to the following chart to choose the correct nozzle for the job to be performed.

CHANGING NOZZLES ON SPRAY WAND (FIG. 5)

⚠ DANGER: Risk of fluid injection. Do not direct discharge stream toward persons, unprotected skin, eyes or any pets or animals. Serious injury will occur.

<u>MARNING:</u> Flying objects could cause risk of serious injury. Do not attempt to change nozzles while pressure washer is running. Turn engine off before changing nozzles.

- 1. Pull quick-connect coupler (E) back and insert nozzle (K).
- 2. Release quick-connect coupler and twist nozzle to make sure it is secure in coupler.

⚠ WARNING: Flying object could cause risk of serious injury. Ensure nozzle is completely inserted in quick-connect socket and quick-connect collar is fully engaged (forward) before squeezing gun trigger.



NOZZLE COLOR	SPRAY PATTERN	USES	SURFACES*
Red	0°	powerful pinpoint for spot cleaning of hard, unpainted surfaces or for high reach areas	unpainted metal or concrete; DO NOT use on wood
Yellow	15°	intense cleaning of unpainted hard surfaces	grills, driveways, concrete or brick walkways, unpainted brick or stucco
Green	25°	standard cleaning nozzle for most applications	yard tools, sidewalks, lawn furniture, unpainted siding, stucco, gutters and eaves, concrete, brick surfaces
White	40°	cleaning of painted or delicate surfaces	auto/RV, marine, wood, painted brick and stucco, vinyl, painted siding
Black	low pressure	applies cleaning solutions	Low pressure spray is safe on all surfaces. Always verify compatibility of cleaning solution prior to use.


*NOTICE: The high pressure spray from your pressure washer is capable of causing damage to surfaces such as wood, glass, automobile paint, auto striping and trim, and delicate objects such as flowers and shrubs. Before spraying, check the item to be cleaned to assure yourself that it is strong enough to resist damage from the force of the spray.

HOW TO APPLY CHEMICALS/CLEANING SOLVENTS (FIG. 6)

Applying chemicals or cleaning solvents is a low pressure operation. **NOTE:** Use only soaps and chemicals designed for pressure washer use. **Do not use bleach.**

To Apply Chemicals:

- Ensure detergent siphon hose (F, Figure 6) is attached to barbed fitting location near high pressure hose connection of pump as shown.
- Place other end of detergent siphon hose with filter on it into container holding chemical/cleaning solution. NOTE: For every 7 gallons of water pumped 1 gallon of chemical/cleaning solution will be used.

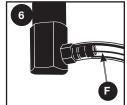

- 3. Install low pressure (black) nozzle into quick connect fitting of spray wand, see **How To Use Spray Wand** paragraph in this section.
- 4. After use of chemicals, place detergent siphon hose into container of clean water and draw clean water through chemical injection system to rinse system thoroughly. If chemicals remain in the pump, it could be damaged. Pumps damaged due to chemical residue will not be covered under warranty.

NOTE: Chemicals and soaps will not siphon if the black soap nozzle is not installed on the spray wand.

STARTING (FIG. 7-10)

<u>MARNING:</u> To reduce the risk of injury, read the pressure washer instruction manual and the engine instruction manual before starting pressure washer.

⚠ DANGER: Risk of fluid injection and laceration. When using the high pressure setting, DO NOT allow the high pressure spray to come in contact with unprotected skin, eyes, or with any pets or animals. Serious injury will occur.

 Your washer operates at fluid pressures and velocities high enough to penetrate human and animal flesh, which could result in amputation or other serious injury. Leaks caused by loose fittings or worn or damaged hoses can result in injection injuries. DO NOT TREAT FLUID INJECTION AS A SIMPLE CUT! See a physician immediately!

⚠ DANGER: Carbon Monoxide. Using an engine indoors can kill you in minutes. Engine exhaust contains high levels of carbon monoxide (CO), a poisonous gas you cannot see or smell. You may be breathing CO even if you do not smell engine exhaust.

- Breathing exhaust fumes will cause serious injury or death! Engine exhaust contains carbon monoxide, an odorless and deadly gas.
- Operate pressure washer in a well-ventilated area. Avoid enclosed areas such as garages, basements, etc.
- Never operate unit in or near a location occupied by humans or animals.

 $\underline{\wedge}$ WARNING: Risk of Fire, Asphyxiation and Burn. Never fill fuel tank when engine is running or hot. Do not smoke when filling fuel tank.

- Never fill fuel tank completely. Fill tank to 1/2" (12.7 mm) below bottom of filler neck to provide space for fuel expansion. Wipe any fuel spillage from engine and equipment before starting engine.
- DO NOT let hoses come in contact with very hot engine muffler during or immediately after use of your pressure washer. Damage to hoses from contact with hot engine surfaces will NOT be covered by warranty.


NOTICE: Risk of property damage. Never pull water supply hose to move pressure washer. This could damage hose and/or pump inlet.

- DO NOT use hot water, use cold water only.
- Never turn water supply off while pressure washer engine is running or damage to pump will result.
- DO NOT stop spraying water for more than two minutes at a time. Pump operates
 in bypass mode when spray gun trigger is not pressed. If pump is left in bypass
 mode for more than two minutes internal components of the pump can be
 damaged.


Prior to starting, refer to your engine manual for proper starting procedure.

 In a well ventilated outdoor area add fresh, high quality, unleaded gasoline with a pump octane rating of 86 or higher. Do not overfill. Wipe up spilled fuel before starting the engine. Refer to **Engine Owner's Manual** for correct procedure.

IMPORTANT: Ethanol ShieldTM (sold separately) is a fuel stabilizer that helps eliminate and prevent ethanol related problems in power equipment. Follow the instructions on the container and add to the gasoline.

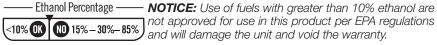

- 2. Check engine oil level. Refer to **Engine Owner's Manual** for correct procedure.
- Check pump oil level. The oil level should come to the dot in the middle of the sight glass. Refer to the **Pump** paragraph under *Maintenance*.
- Connect the water hose to the water source. Turn the water source on to remove all air from the hose. When a steady stream of water is present, turn the water source off.
- Verify the filter screen (M) is in water inlet of pump. NOTE: Convex side faces out.
- Connect water source (N) to pump inlet (J). NOTE: Water source must provide a minimum of 5 gallons per minute at 20 PSI.
- 7. Connect high pressure hose (C) to pump outlet (I).

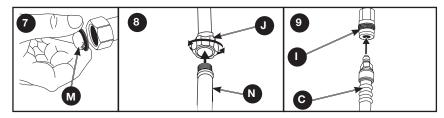

riangle WARNING: To reduce the possibility of contamination always protect against backflow when connected to a potable water system.

 Choose the correct nozzle for the job to be performed. See How To Use spray Wand instructions in this section. NOTE: If applying a chemical or cleaning solution, see How To Apply Chemicals/Cleaning Solvents instructions in this section. Turn water source on.

NOTICE: Risk of property damage. Failure to do so could cause damage to the pump.

- 10. Remove all air from the pump and high pressure hose by depressing trigger until a steady stream of water is present.
- 11. Start engine. See Engine Owner's Manual for correct procedure.

MARNING: Risk of unsafe operation. If engine does not start after two pulls, squeeze trigger of gun to relieve pump pressure. Pull starter cord slowly until resistance is felt. Then pull cord rapidly to avoid kickback and prevent hand or arm injury.

NOTE: If the oil level in the engine is low, the engine will not start. If the engine does not start, check the oil level and add oil as needed.

12. Depress trigger on gun to start water flow.

⚠ WARNING: Do not allow the unit to run for more than two minutes without the gun trigger being pulled. This could cause overheating and damage to the pump. When the temperature inside the pump rises too high, the thermal relief valve will open and release a spray of water from the pump to lower the internal temperature. The valve will then close.

⚠ WARNING: Risk of unsafe operation. Stand on a stable surface and grip gun/spray wand firmly with both hands. Expect the gun to kick when triggered.

13. Release trigger to stop water flow.

⚠ WARNING: Risk of injury from spray. Always engage the trigger lock (O) when gun is not in use. Failure to do so could cause accidental spraying.

SHUTTING DOWN

After each use, if you have applied chemicals, place detergent siphon hose into container of clean water and draw clean water through chemical injection system to rinse system thoroughly.



NOTICE: Risk of property damage. Failure to do so could cause damage to the pump.

2. Turn engine off. See **Engine Owner's Manual**.

NOTICE: Risk of property damage. NEVER turn the water off with the engine running.

- 3. Turn water source off.
- 4. Pull trigger on spray gun to relieve any water pressure in hose or spray gun.

 NOTE: Failure to release system pressure will prevent removal of high pressure hose from spray gun or pump connection.
- 5. See **Storage** section in this manual for proper storage procedures.

MAINTENANCE

⚠ WARNING: Risk of burn hazard. When performing maintenance, you may be exposed to hot surfaces, water pressure or moving parts that can cause serious injury or death.

⚠ WARNING: Risk of fire hazard. Always disconnect, spark plug wire, let the engine cool and release all water pressure before performing any maintenance or repair. The engine contains flammable fuel. Do not smoke or work near open flames while performing maintenance.

To ensure efficient operation and longer life of your pressure washer, a routine maintenance schedule should be prepared and followed. If the pressure washer is used in unusual conditions, such as high-temperatures or dusty conditions, more frequent maintenance checks will be required.

ENGINE

Consult the **Engine Owner's Manual** for the manufacturer's recommendations for any and all maintenance. **NOTE:** The engine drain plug is located at the rear of the unit.

PUMP (FIG. 11)

NOTE: The Pump was filled with oil at the factory. The preferred oil is SIMPSON® Premium Pump Crankcase Oil. If this oil is not available, an SAE 15W-40 oil may be used. Change the pump oil after the first 50 hours of operation and every 100 hours thereafter, or every 3 months.

TO CHECK OIL

The oil level should come to the dot in the middle of the sight glass (AA).

HOW TO CHANGE PUMP OIL

- Loosen pump oil fill plug (BB).
- Place a container under the pump oil drain plug (CC).
- Remove pump oil drain plug.
- 4. After oil is drained, replace pump oil drain plug. Tighten securely.
- 5. Refill pump using SIMPSON® Premium Pump Crankcase Oil. If this oil is not available, an SAE 15W-40 oil may be used.
- 6. Replace pump oil fill plug and tighten securely.


CONNECTIONS

Connections on pressure washer hoses, gun and spray wand should be cleaned regularly and lubricated with light oil or lithium grease to prevent leakage and damage to the o-rings.


NOZZLE CLEANING (FIG. 12)

If the nozzle becomes clogged with foreign materials, such as dirt, excessive pressure may develop. If the nozzle becomes partially clogged or restricted, the pump pressure will pulsate. Clean the nozzle immediately using the nozzle kit supplied and the following instructions:

Shut off the pressure washer and turn off the water supply.

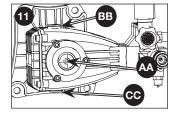

- 2. Pull trigger on gun handle to relieve any water pressure.
- 3. Disconnect the spray wand from the gun.
- 4. Remove the high pressure nozzle (K) from the spray wand. Remove any obstructions with the nozzle cleaning tool provided and backflush with clean water.
- 5. Direct water supply (N) into nozzle to backflush loosened particles for 30 seconds.
- 6. Reassemble the nozzle to the wand.
- 7. Reconnect spray wand to gun and turn on water supply.
- 8. Start pressure washer and place spray wand into high pressure setting to test.

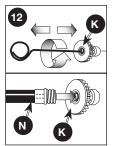

CLEAN THE WATER INLET FILTER (FIG. 7)

This screen filter should be checked periodically and cleaned if necessary.

- 1. Remove filter by grasping end and removing it from water inlet of pump.
- 2. Clean filter by flushing it with water on both sides.
- 3. Re-insert filter into water inlet of pump. **NOTE:** Convex side faces out.

NOTE: Do not operate the pressure washer without filter properly installed.

STORAGE

ENGINE

Consult the **Engine Owner's Manual** for manufacturer's recommendations for storage.

TO PREVENT FUEL-RELATED PROBLEMS

- Add Ethanol Shield™ fuel stabilizer following the manufacturer's instructions. When adding a gasoline stabilizer, fill the fuel tank with fresh gasoline. If only partially filled, air in the tank will promote fuel deterioration during storage. If you keep a container of gasoline for refueling, be sure that it contains only fresh gasoline.
- After adding a gasoline stabilizer, run the engine outdoors for 10 minutes to be sure that treated gasoline has replaced the untreated gasoline in the carburetor.
- 3. Turn the fuel valve to the OFF position.
- 4. Continue to run the engine until it stops from the lack of fuel in the carburetor fuel bowl. Running time should be less than 3 minutes.

PUMP

The manufacturer recommends using SIMPSON® / POWERWASHER® Pump Guard or equivalent when storing the unit for more than 30 days and/or when freezing temperatures are expected. SIMPSON® / POWERWASHER® Pump Guard is environmentally friendly.

NOTE: Using pump guard helps provide proper lubrication to the internal seals of the pump regardless of temperature or environment.

NOTICE: Risk of property damage. Use only SIMPSON® / POWERWASHER® Pump Guard or equivalent. Other products could be corrosive and/or contain alcohol which may cause pump damage.

1. Turn off pressure washer and disconnect hoses from pump.

- 2. Unscrew bottle valve from Pump Guard bottle and remove seal.
- Screw bottle valve back onto bottle.
- 4. Attach bottle to water inlet of pump.
- 5. Squeeze bottle to inject contents into pump.
- With ignition switch off, simultaneously pull starter rope and squeeze bottle. Repeat until protector fluid exits pump outlet. NOTE: This step may require two people.

ACCESSORIES

⚠ DANGER: Risk of fluid injection. When using replacement spray wands or guns with this pressure washer, DO NOT use a spray wand and/or spray gun/wand combination that is shorter in length than what was provided with this pressure washer as measured from the nozzle end of the wand to the gun trigger.

NOTICE: The use of any other accessory not recommended for use with this tool could be hazardous. Use only accessories rated equal to or greater than the rating of the pressure washer.

SPECIFICATIONS

* Rated Pressure and Rated Water Flow is within manufacturing tolerance of (+/- 10%).

In a continued commitment to improve quality, the manufacturer reserves the right to make component changes, design changes, or specification changes when necessary and without notice.

ENGINE

Covered by engine manufacturer warranty. See engine manual.

HIGH PRESSURE PUMP (DEFECTS IN MATERIAL AND WORKMANSHIP)Covered by pump manufacturer warranty.

FRAME (DEFECTS IN MATERIAL AND WORKMANSHIP)

Ten (10) years from date of purchase.

ACCESSORIES (DEFECTS IN MATERIAL AND WORKMANSHIP)

Includes nozzles, hoses, spray guns, wands, tires, feet Ninety (90) days from date of purchase.

TROUBLE SHOOTING GUIDE

OPERATIONAL ISSUE	POSSIBLE CAUSE	SOLUTION
Engine will not No fuel		Add fresh fuel
start (see Engine	Pressure builds up	Squeeze gun trigger to relieve
Owner's Manual	after two pulls on	pressure
for further engine	the recoil starter	
troubleshooting)	or after initial use	
	Choke lever in the "No Choke" position	Move choke to the "Choke" position
	Spark plug wire not attached	Attach spark plug wire
No or low	Spray wand not	See How to Use Spray Wand
pressure	in high pressure	instructions in the Operation Section
(initial use)	Low water supply	Water supply must be at least 5 gpm @ 20 PSI
	Leak at high pressure	Repair leak. Apply sealant
	hose fitting	tape if necessary
	Nozzle obstructed	See Nozzle Cleaning instructions
		in the <i>Maintenance</i> section
	Water filter screen	Remove and clean filter. See
	clogged	Cleaning Water Inlet Filter
		paragraph in the <i>Maintenance</i>
		section for the correct procedure
	Air in hose	Turn off the engine, then the water
	7 111 111 11000	source. Disconnect the water source
		from the pump inlet and turn the
		water source on to remove all air
		from the hose. When there is a
		steady stream of water present,
		turn water source off. Re-con-
		nect water source to pump inlet
		and turn on water source. Squeeze
		trigger to remove remaining air
	Choke in the "Choke" position	Move choke to the "No Choke" position
	High pressure	Use high pressure hose under
	hose is too long	100 feet (30 m)
Will not draw	Spray wand not	See How to Use Spray Wand
chemicals	in low pressure	paragraph in the <i>Operation</i> Section
	Chemical filter clogged	Clean filter
	Chemical screen not	Make sure end of detergent
	in cleaning solution	siphon hose is fully submerged
	in oldaning solution	into cleaning solution
	Chemical too thick	Dilute chemical. Chemical should
	Chemical too trick	be the same consistency as water
	Pressure hose	Lengthen water supply hose
	is too long	instead of high pressure hose
	is too long	Instead of high pressure hose

OPERATIONAL POSSIBLE CAUSE ISSUE		SOLUTION	
·		Please contact our customer service	
		department	
No or low pressure (after period of	Worn seal or packing	Please contact our customer service department	
normal use)	Worn or obstructed valves	Please contact our customer service department	
	Worn unloader piston	Please contact our customer service department	
	Broken belts	Replace belts. Please contact our customer service department	
Water leaking at	Worn or torn o-ring	Check and replace	
gun/spray wand connection	Loose hose connection	Tighten	
Water leaking	Loose connections	Tighten	
at pump	Piston packings worn	Please contact our customer service department	
	Worn or torn o-ring	Please contact our customer service department	
	Pump head or tubes damaged from freezing	Please contact our customer service department	
		See Nozzle Cleaning paragraph in the <i>Maintenance</i> section for the correct procedure	
Oil leaking at pump	Oil seals worn	Please contact our customer service department	
	Loose drain plug	Tighten	
	Worn drain plug o-ring	Check and replace	
	Worn fill plug o-ring	Check and replace	
	Pump overfilled	Check for correct amount	
	Incorrect oil used	Drain and fill with correct amount and type of oil	
	Vent plug is clogged	Clean vent plug; blow air through it to remove any blockage. If problem persists, replace plug	
	Air filter filled with oil	Clean and/or replace filter element. Refer to Engine Owner's Manual for correct procedure.	