



SUNEX®
T O O L S

!WARNING

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- lead from lead-based paints,
- crystalline silica from bricks and cement and other masonry products, and
- arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

!WARNING



ALWAYS READ INSTRUCTIONS BEFORE USING POWER TOOLS



ALWAYS WEAR SAFETY GOGGLES



WEAR HEARING PROTECTION



AVOID PROLONGED EXPOSURE TO VIBRATION

SPECIFICATIONS

Pad Size	16" x 2-1/2"	Sound Level	93 dBA
Stroke Length	1"	Height.....	6-3/16"
Strokes Per Min	2500	Length	16"
Avg. Air Cons.	8 CFM	Shipping Wt.....	7 lbs.
Rec. Air Pressure	90 PSI		

SX288C

**DUAL PISTON
STRAIGHT
LINE SANDER**

!WARNING

FAILURE TO OBSERVE THESE WARNINGS COULD RESULT IN INJURY.



THIS INSTRUCTION MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.

READ THIS INSTRUCTION MANUAL CAREFULLY AND UNDERSTAND ALL INFORMATION *BEFORE* OPERATING THIS TOOL.

- Always operate, inspect and maintain this tool in accordance with American National Standards Institute Safety Code of Portable Air Tools (ANSI B186.1) and any other applicable safety codes and regulations.
- For safety, top performance and maximum durability of parts, operate this tool at 90 psig/6.2 bar max air pressure with 3/8" diameter air supply hose.



- Always wear impact-resistant eye and face protection when operating or performing maintenance on this tool. Always wear hearing protection when using this tool.



- High sound levels can cause permanent hearing loss. Use hearing protection as recommended by your employer or OSHA regulation.



- Keep the tool in efficient operating condition.
- Operators and maintenance personnel must be physically able to handle the bulk, weight and power of this tool.



- Air under pressure can cause severe injury. Never direct air at yourself or others. Always turn off the air supply, drain hose of air pressure and detach tool from air supply before installing, removing or adjusting any accessory on this tool, or before performing any maintenance on this tool. Failure to do so could result in injury. Whip hoses can cause serious injury. Always check for damaged, frayed or loose hoses and fittings, and replace immediately. Do not use quick detach couplings at tool. See instructions for correct set-up.



- Air powered tools can vibrate in use. Vibration, repetitive motions or uncomfortable positions over extended periods of time may be harmful to your hands and arms. Discontinue use of tool if discomfort, tingling feeling or pain occurs. Seek medical advice before resuming use.



- Place the tool on the work before starting the tool.
- Slipping, tripping and/or falling while operating air tools can be a major cause of serious injury or death. Be aware of excess hose left on the walking or work surface.



- Keep body working stance balanced and firm. Do not overreach when operating the tool.
- Anticipate and be alert for sudden changes in motion during start up and operation of any power tool.



- Do not carry tool by the hose. Protect the hose from sharp objects and heat.
- Tool shaft may continue to rotate briefly after throttle is released. Avoid direct contact with accessories during and after use. Gloves will reduce the risk of cuts or burns.

- Keep away from rotating end of tool. Do not wear jewelry or loose clothing. Secure long hair. Scalping can occur if hair is not kept away from tool and accessories. Choking can occur if neckwear is not kept away from tool and accessories.

- Never mount a grinding wheel on a sander. A grinding wheel that bursts can cause very serious injury or death when not properly guarded. Inspect backing pad before each use. Do not use if cracked or damaged.

- Avoid direct contact with moving sanding pad to prevent pinching or cutting of hands or other body parts.

- Do not lubricate tools with flammable or volatile liquids such as kerosene, diesel or jet fuel.


- Do not force tool beyond its rated capacity.

- Do not remove any labels. Replace any damaged labels.

SX288C


Dual Piston

Straight Line Sander

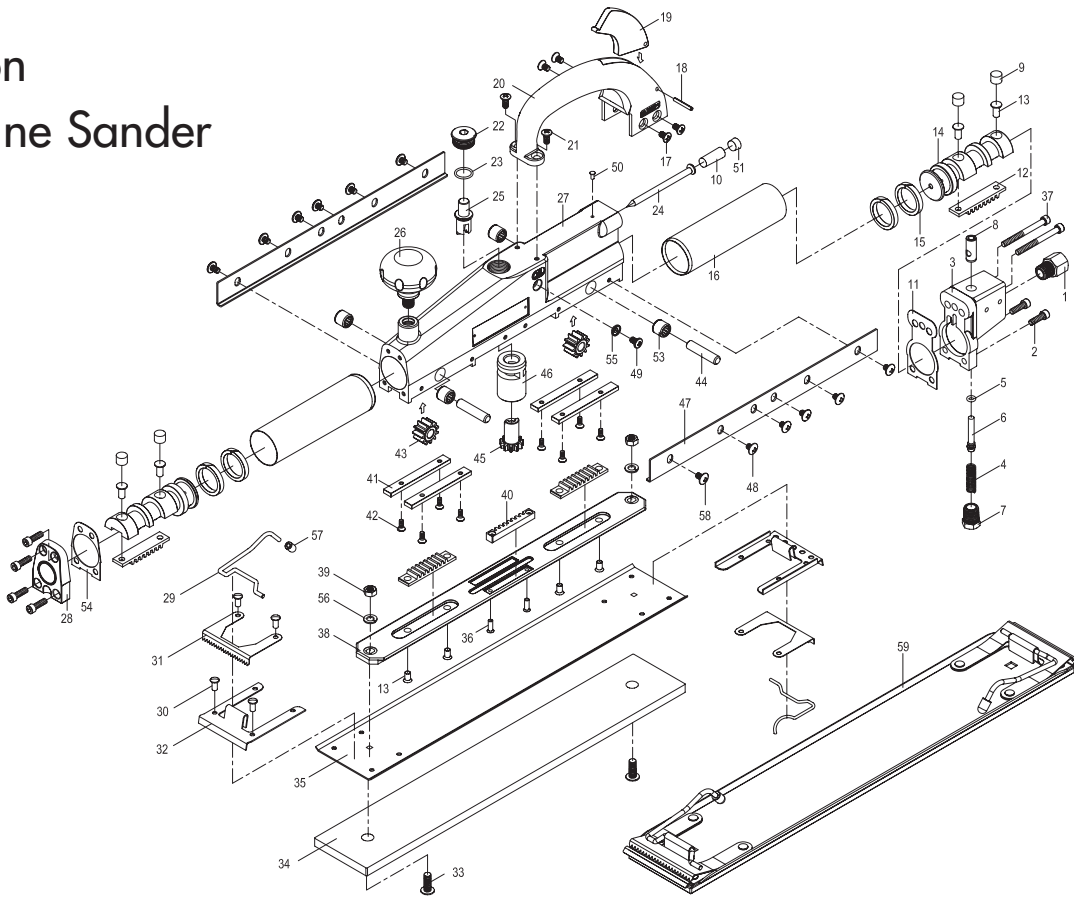

Ref. #	Item #	DESCRIPTION	QTY.
1	RS28601	Hose Adaptor	1
2	RS28602	Cap Screw	6
3	RS28603	Rear Cap	1
4	RS28604	Valve Spring	1
5	RS28605	O-Ring	1
6	RS28606	Throttle Valve	1
7	RS28607	Valve Plug	1
8	RS28608	Valve Bushing	1
9	RS28609	Oil Cotton	4
10		Oil Cotton (Included in #27)	1
11	RS28611	Gasket	1
12		Flat Gear (Included in #14 & 38)	4
13		Rivet (Included in #14 & 38)	8
14	RS28614A	Piston Assembly (Incl. #12, 13)	2
15	RS18615	Piston Ring	4
16		Cylinder (Included in #27)	2
17	RS28617	Screw	4
18	RS28618	Spring Pin	1
19	RS28619	Trigger	1
20	RS28620	Handle	1
21	RS28621	Screw	2
22	RS28622	Plug	1
23	RS28623	O-Ring	1
24		Pin (Included in #27)	1
25	RS28625	Switch	1
26	RS28626	Palm Handle	1
27	RS28627	Housing (Incl. #10, 16, 24, 46, 50 & 51)	1
28	RS28626	Front Cover	1
29	*	Wire Clip	2
30	*	Rivet	8
31	*	Compression Spacer	2
32	*	Fixed Plate	2
33	RS28633	Screw	2
34	*	Foam Pad	1
35	*	Pad Plate	1
36		Rivet (Included in #38)	2
37	RS28637	Cap Screw	2
38	RS28638A	Carrier Assembly (Incl. #12, 13, 36, 40)	1
39	RS28639	Locking Nut	2
40		Slide Gear (Included in #38)	1
41	RS28641	Brass Plate	4
42	RS28642	Screw	8
43	RS28643	Gear	2
44	RS28644	Gear Shaft	2
45	RS28645	Switch Gear	1
46		Switch Sleeve (Included in #27)	1
47	RS28647	Boat Guide	2
48	RS28648	Screw	12
49	RS28649	Screw	1
50		Rivet (Included in #27)	1
51		Plug (Included in #27)	1
53	RS28653	Needle Bearing	4
54	RS28654	Front Gasket	1
55	RS28655	Washer	1
56	RS28656	Washer	2
57	*	Plastic Plug	2
58	RS28658	Screw	2

* Only available as Ref. # 59 - RS28635A Pad Assembly (incl. #29, 32 - 35, 57)

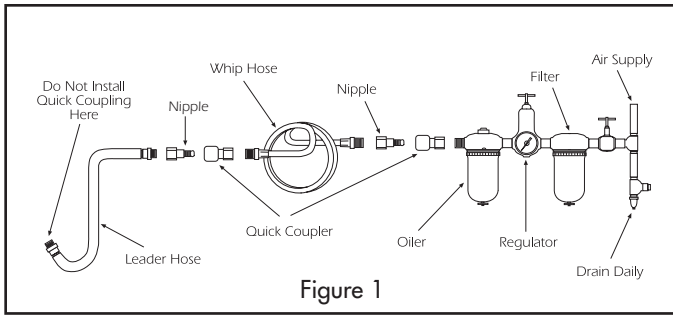

Air Supply...

Tools of this class operate on a wide range of air pressures. It is recommended that air pressure of these tools measures 90 PSI at the tool while running free. Higher pressure and unclean air will shorten tool life because of faster wear and may create a hazardous condition.

Water in the air line will cause damage to the tool. Drain the air tank daily. Clean the air inlet filter screen on at least a weekly schedule. The recommended hookup procedure can be viewed in Figure 1.

The air inlet (B) Figure 2, used for connecting air supply, has standard 1/4" NPT American Thread.

Line pressure should be increased to compensate for unusually long air hoses (over 25 feet). Minimum hose diameter should be 3/8" I.D. and fittings should have the same inside dimensions.

Lubrication...

Lubricate the tool daily with a good grade of air tool oil. If no air line oiler is used, run a teaspoon of oil through the tool. The oil can be squirted into the tool air inlet (B) Figure 2, or into the hose at the nearest connection to the air supply, then run the tool. A rust inhibitive oil is acceptable for air tools.

WARNING: After an air tool has been lubricated, oil will discharge through the exhaust port during the first few seconds of operation. The exhaust port must be covered with a towel before applying air pressure to prevent serious injury.

Troubleshooting...

Other factors outside the tool may cause loss of power or erratic action. Reduced compressor output, excessive drain on the air line, moisture or restrictions in air pipes or the use of hose connections of improper size or poor condition may reduce air supply. Grit or gum deposits in the tool may cut power and may be corrected by cleaning the air strainer and flushing out the tool with gum solvent oil or an equal mixture of SAE #10 oil and kerosene. If outside conditions are in order, and the tool continues erratic action or low power, disconnect tool from hose, and take tool to your nearest authorized service center.

Operation...

Start the sander off the work, set it down on the work evenly and move it slowly back and forth in wide, overlapping areas. When finished sanding, lift sander off the work before stopping the motor. To install sandpaper, flip up levers on paper clips. Insert pre-cut 19" x 2-1/2" sandpaper under paper clips. Push levers back down to secure paper.