

3M 6894/37004*

Nose Cup Assembly

Replacement Instructions

Important: Keep these *User Instructions* for reference

* 37004 is a catalog number only. NIOSH approved as 3M™ 6894 Nose Cup Assembly.

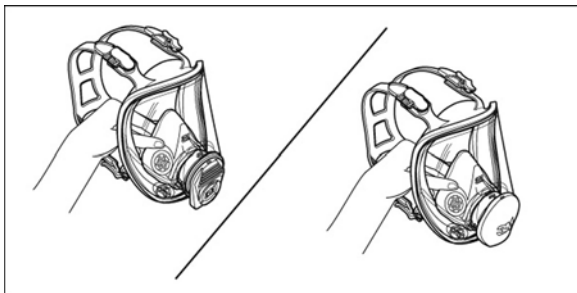


Fig. 1

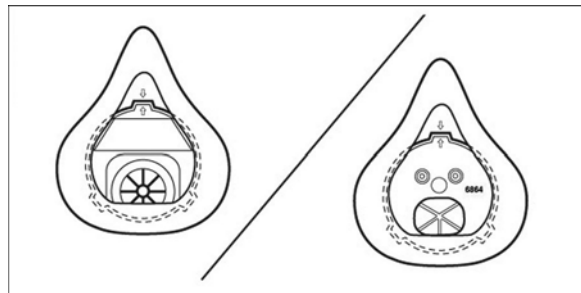


Fig. 2

The 3M™ 6894 Nose Cup Assembly consists of a nose cup and inhalation valves. It is designed to install onto the center port adapter of the 3M™ 6000 Series Full Facepiece and comfortably fit over the respirator wearer's nose and mouth to aid in purging exhaled breath and prevent lens fogging.

1. Remove the nose cup assembly by pulling away from center adapter base inside facepiece. (Fig. 1)
2. Position nose cup assembly onto center port adapter as shown, aligning 3 tabs in notches. (Fig. 2)