

ATTENTION!



Instructions for installing EX7201HC onto EX7217RC 72" Professional Roller Cabinet

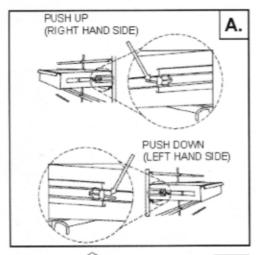

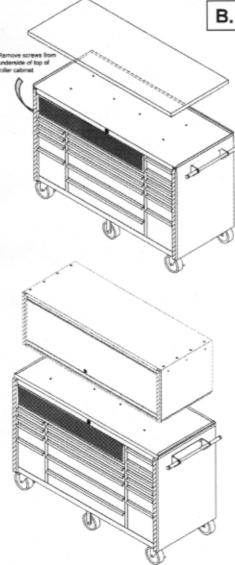

1. REMOVE STAINLESS STEEL TOP FROM ROLLER CABINET

- A. Remove top drawers from roller cabinet:
 - 1. Pull out top drawer so it is almost fully extended..
 - Find black release lever located toward the front of each drawer glide. See Diagram A.
 - Simultaneously press the right side release lever down and the left side release lever up.
 - While release levers are in up and down position, pull the drawer passed the drawer stop and completely out of the roller cabinet.
 - 4. Repeat steps 1 -3 to remove the second long drawer.
- B. Next, remove the 6 screws which hold the stainless steel in place from the underside of the top of the roller cabinet. See location of screws as shown in Diagram B.
- C. Lift and remove stainless steel top from roller cabinet. <u>NOTE</u>: Stainless steel top is heavy and requires more than 1 person to lift and remove.

2. POSITIONING HUTCH ON ROLLER CABINET

- A. Gently move hutch into place on top of roller cabinet by positioning bottom back corners of hutch against the back corners of fence rail along top edge of roller cabinet.
- B. Once back hutch is in place and resting on top of roller cabinet, then gently set down the rest of the hutch.
- C. After hutch is properly positioned on roller cabinet, screw the hutch in place by re-inserting and tightening the 6 screws which held the stainless steel top in place.
- D. Replace the two top drawers into the roller cabinet.
 - 1. Extend the drawer glides from the roller cabinet.
 - Insert the brackets on each side of the drawer into the slots in the cabinet glides, being careful that they are properly positioned.
 - Once glides are properly inserted, completely close the drawer to set the glides in their proper positions.