

PORTACOOOL JETSTREAM OWNER'S MANUAL

PACJS220, PACJS230,
PACJS240, PACJS250,
PACJS260, PACJS270




PORTACOOOL®

WHEN COMFORT COUNTS™


QUICK SETUP

1

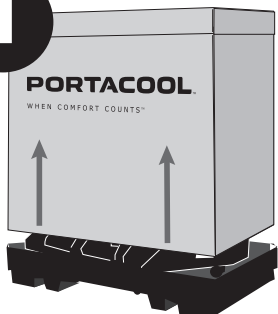

Remove box and pallet

2

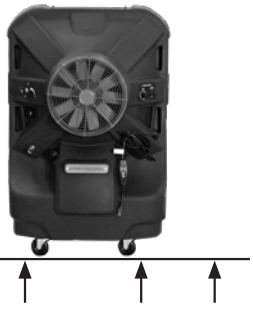

Position cooler on level surface

3



Fill tank or attach water hose*

*Maximum water pressure 50 psi/345 kPa

4



Plug into appropriate outlet

5

For setup, Kool® evaporative media should appear wet before starting the fan. Check the water gauge to monitor water level in tank. The water adjustment valve on each portable evaporative cooler is set at max flow. However, ensure the knob is turned completely to the right before use. Turn to the left to increase water flow. If entrainment occurs - water is spitting from the front of the product - use the valve to decrease the water flow until entrainment ceases.

Fill the tank, then turn on the pump switch and the fan

6

Your Portacool portable evaporative cooler is meant to be used in an open-air environment, such as a patio. If you plan to use your evaporative cooler in a more closed environment – such as a garage, sunroom or barn – you must provide adequate ambient airflow to ensure your evaporative cooler works at its highest efficiency. When using in a semi-closed environment, be sure to leave a door or window open to allow for the proper amount of airflow.

Ensure proper airflow is available

SAFETY

OPERATION WARNINGS

- 1) Not for use by children
- 2) Not for use by persons with reduced physical, sensory or mental capabilities
- 3) Not for use by persons who have not reviewed the owner's manual and familiarized themselves with the operation of the product.


SAFE OPERATION

To reduce the risk of electric shock, fire or injury:

- Do not operate any evaporative cooler with a damaged cord or plug.
- Do not run power cord under carpeting or cover with throwrugs, runners or similar coverings. Arrange power cord away from traffic areas to avoid tripping hazards.
- Read the evaporative cooler's instructions, owner's manual and labels thoroughly before use.
- Always unplug the power cord to the evaporative cooler before performing inspections or repairs.
- Always unplug the evaporative cooler during filling and cleaning.
- Do not step on or roll over power cord with heavy or sharp objects.
- Do not operate evaporative cooler unless all Kuul® evaporative media is securely in place.
- Test the GFCI receptacle or breaker monthly to ensure it is functioning properly if applicable.
- Remove the plug from the electrical receptacle by pulling on the plug, not the power cord.
- Operation near open flames or sparks is not recommended.
- If operating near open flame or sparks, ensure the pump is continuously running in order to saturate and wet Kuul evaporative media.
- When cleaning your evaporative cooler, ensure water does not get into the motor or electrical system to prevent damage.
- The use of extension cords with your evaporative cooler is not recommended. However, if the owner determines that his or her circumstance or intended use requires the use of an extension cord, the following requirements must be met:
 - Use properly grounded 14 AWG or greater for PACJS220-260
 - Use properly grounded 12 AWG or greater for PACJS270
 - Extension cord must not exceed 50 feet (15.24 meters) in length; and
 - Extension cord must be properly grounded
- Evaporative coolers should not be modified in any way (other than repairs made by qualified individuals with Portacool replacement parts).
- If the evaporative cooler is damaged or malfunctions, do not continue to operate it. Refer to the warranty, troubleshooting or FAQ sections of this owner's manual, call Portacool.

OVERVIEW



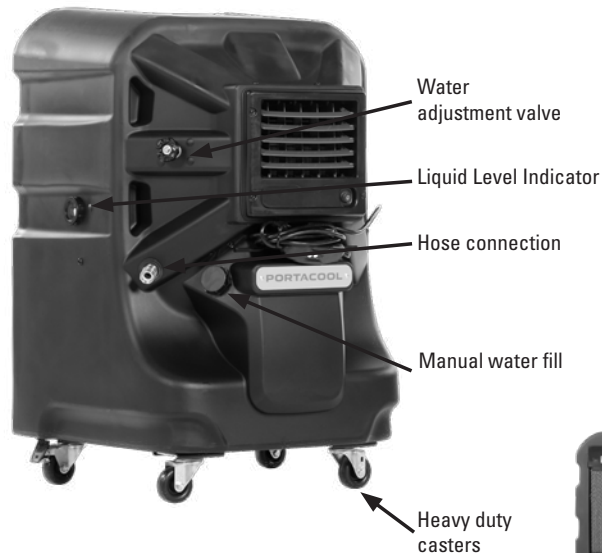

PACJS220



*Products not sold in North America or products with 220/50 volt requirements will not have a GFCI/ELCI.


Two inch drain on bottom

WARNING: Consult Owner's Manual. Service by trained personnel recommended.

 <p>Rotating fan blades Can cause serious injury or cut. Keep hands clear. Turn off product before servicing.</p>	 <p>Hazardous voltage inside Disconnect power before servicing. GFCI device required.</p>	 <p>Some components flammable Keep flames and heat away.</p>	 <p>Do not run pump without water in product Can cause damage to components.</p>
--	--	---	---



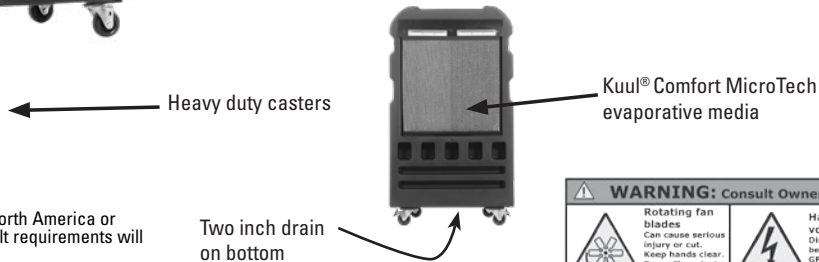

OVERVIEW

PACJS230




*Products not sold in North America or products with 220/50 volt requirements will not have a GFCI/ELCI.

Two inch drain on bottom

WARNING: Consult Owner's Manual. Service by trained personnel recommended.				
 <p>Rotating fan blades Can cause serious injury or cut. Keep hands clean. Turn off product before servicing.</p>	 <p>Hazardous voltage inside Disconnect power before servicing. GFCI device required.</p>	 <p>Some components flammable Keep flames and heat away.</p>	 <p>Do not run pump without water in product Can cause damage to components.</p>	


OVERVIEW

PACJS240

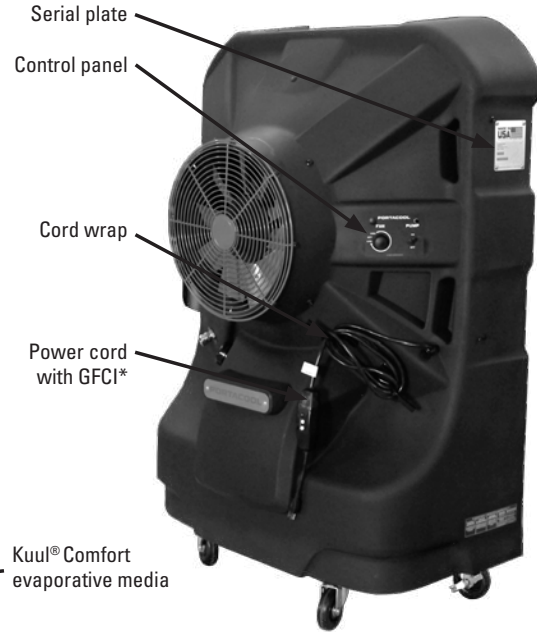



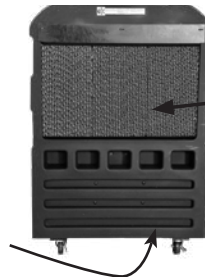

*Products not sold in North America or products with 220/50 volt requirements will not have a GFCI/ELCI.

Two inch drain on bottom




WARNING: Consult Owner's Manual. Service by trained personnel recommended.

 <p>Rotating fan blades Can cause serious injury or cut. Keep hands clear. Turn off product before servicing.</p>	 <p>Hazardous voltage inside Disconnect power before servicing. GFCI device required.</p>	 <p>Some components flammable Keep flames and heat away.</p>	 <p>Do not run pump without water in product Can cause damage to components.</p>
--	--	---	---

OVERVIEW

PACJS250

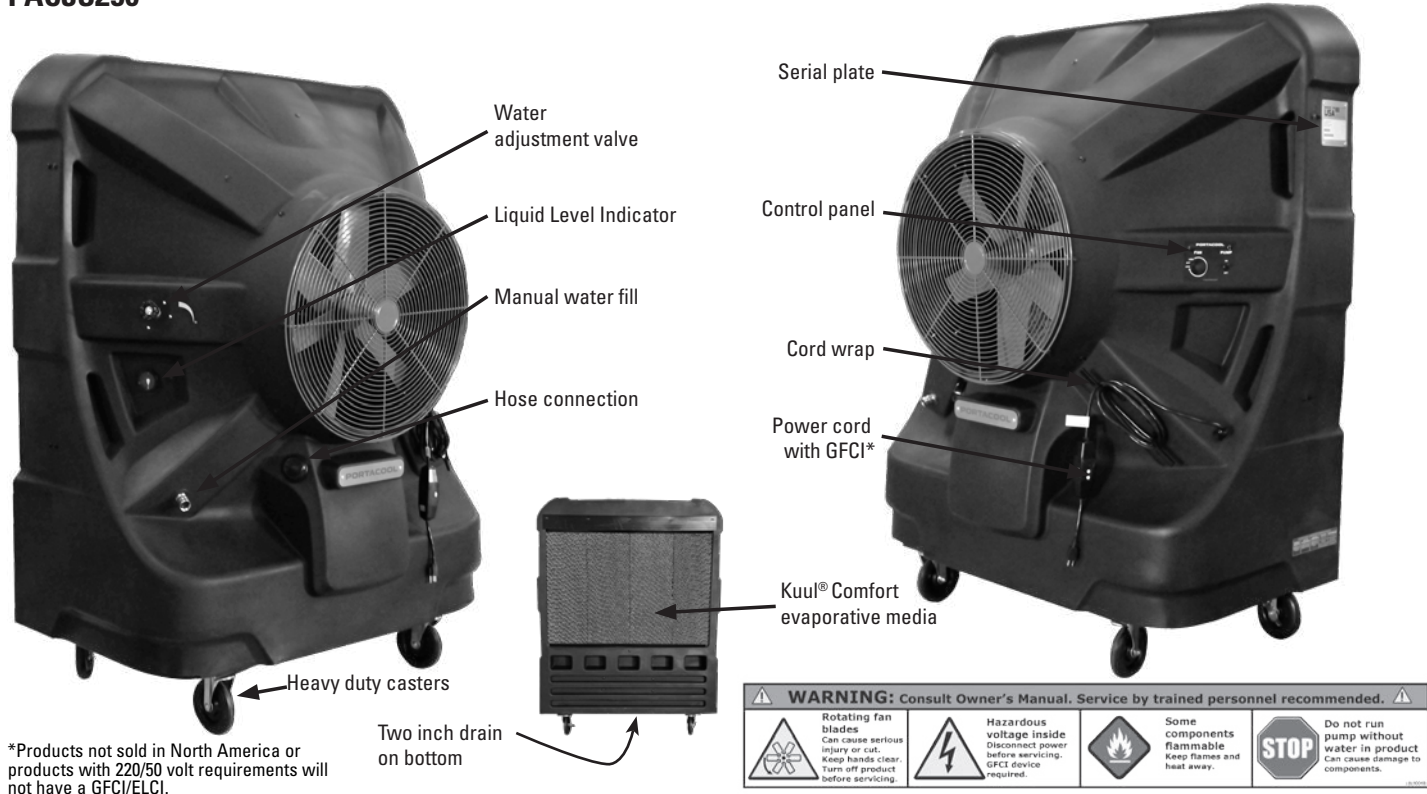

*Products not sold in North America or products with 220/50 volt requirements will not have a GFCI/ELCI.

OVERVIEW

PACJS260




Water adjustment valve


Liquid Level Indicator

Hose connection

Manual water fill

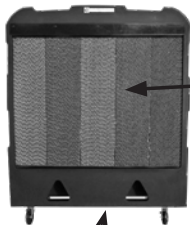

Two inch drain on bottom

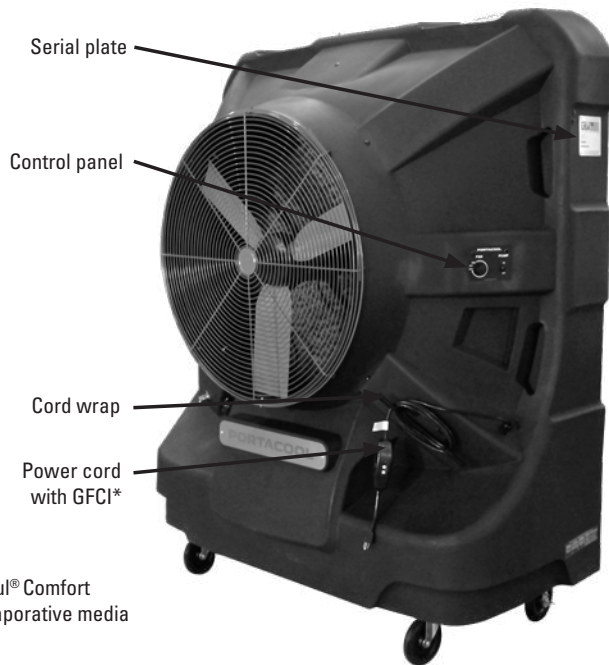

Serial plate

Control panel

Cord wrap

Power cord with GFCI*

Kuul® Comfort evaporative media


*Products not sold in North America or products with 220/50 volt requirements will not have a GFCI/ELCI.

WARNING: Consult Owner's Manual. Service by trained personnel recommended.

<p>Rotating fan blades Can cause serious injury or cut. Keep hands clear. Turn off product before servicing.</p>	<p>Hazardous voltage inside Disconnect power before servicing. GFCI device required.</p>	<p>Some components flammable Keep flames and heat away.</p>	<p>STOP Do not run pump without water in product Can cause damage to components.</p>
--	--	---	---

OVERVIEW



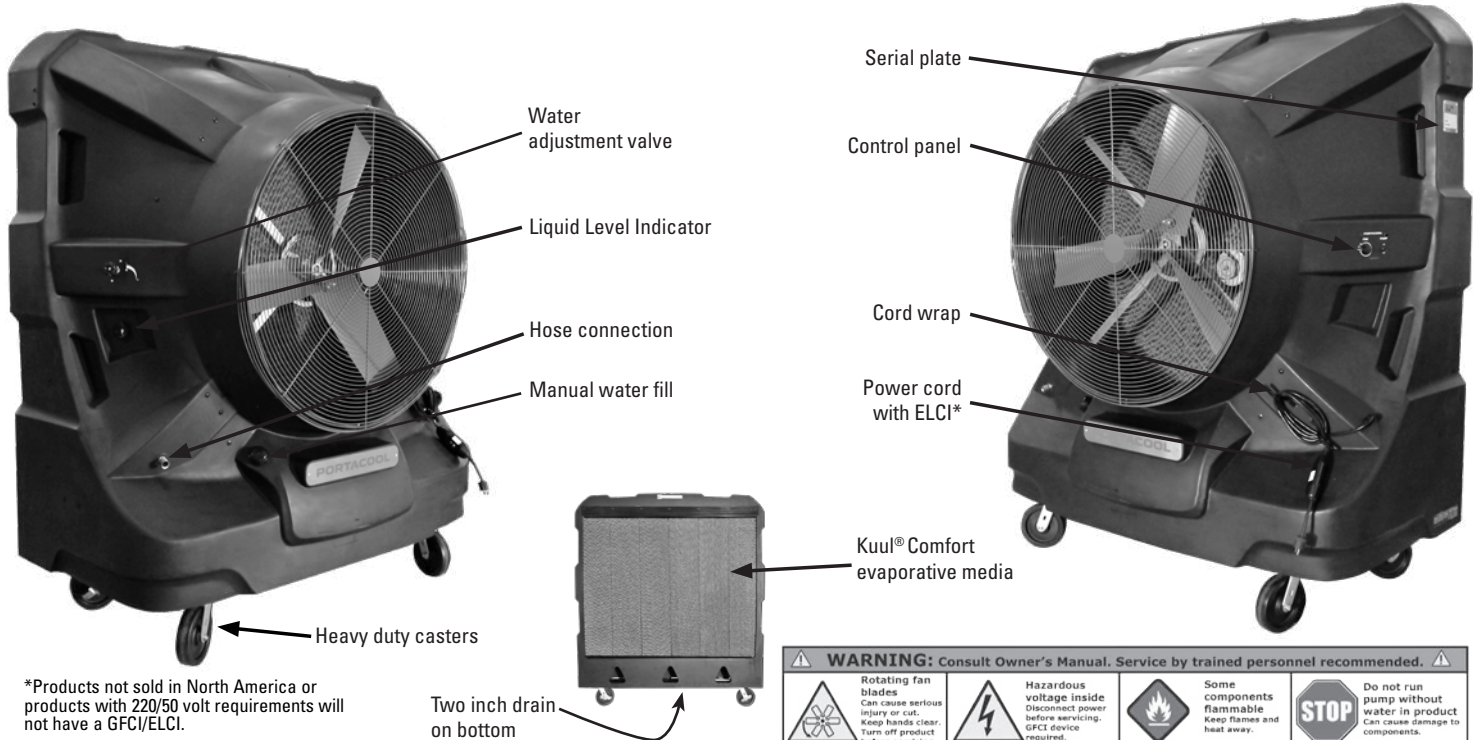

PACJS270**



*Products not sold in North America or products with 220/50 volt requirements will not have a GFCI/ELCI.

**requires a 5-20R power outlet

WARNING: Consult Owner's Manual. Service by trained personnel recommended.

 <p>Rotating fan blades Can cause serious injury or cut. Keep hands clear. Turn off product before servicing.</p>	 <p>Hazardous voltage inside Disconnect power before servicing. GFCI device required.</p>	 <p>Some components flammable Keep flames and heat away.</p>	 <p>Do not run pump without water in product Can cause damage to components.</p>
--	--	---	---

GFCI/ELCI*

The Portacool Jetstream™ series utilizes a GFCI (Grounded Fault Circuit Interrupter) or ELCI (Equipment Leakage Circuit Interrupter) to help protect users against ground electrical faults, which prevent some fire and electrical shock hazards. These devices are intended to trip at very low leakage currents.

- Portacool Jetstream models PACJS220, PACJS230, PACJS240, PACJS250 and PACJS260 use a GFCI, which is built into the power cord
- Portacool Jetstream model PACJS270 uses an ELCI, which is built into the power cord and requires a 5-20R (120V) electrical outlet

The GFCI on models PACJS220, PACJS230, PACJS240, PACJS250 and PACJS260 will automatically reset when the evaporative cooler is plugged into an electrical outlet. The ELCI on model PACJS270 will not automatically reset when the evaporative cooler is plugged into an electrical outlet; the “reset” button located on the ELCI device must be pressed each time the evaporative cooler is plugged in.

*Products not sold in North America or products with 220/50 volt requirements will not have a GFCI/ELCI.



LIQUID LEVEL INDICATOR / PUMP SHUTOFF

A liquid level indicator with integral shutoff gives a visual indication of the water level in the evaporative cooler and will shut off the pump once the water reaches a certain threshold. When this occurs, a red light on the control panel will illuminate to draw attention to the low water level condition and alert the user that the pump has shut off. This light may cycle on and off for a few minutes to draw attention to the low water condition as it tries to exhaust the remaining water.

START UP

PLACEMENT

- 1) Make sure there is a clear, unobstructed path in front of the evaporative cooler to provide maximum airflow.
- 2) If the evaporative cooler is positioned on a raised platform, ensure the platform is stable, well constructed, and will not allow the evaporative cooler to tip over and that it allows for the full weight of the evaporative cooler including a tank full of water. The cooler must be level and in the upright position. The casters should also be locked to prevent the evaporative cooler from moving.
- 3) If placed near a wall or other obstruction, position the evaporative cooler a minimum of 3 feet (0.9 meters) from the wall or obstruction with evaporative media facing the wall. This allows the unrestricted flow of warm air to the Kuul Comfort™ evaporative media side of the evaporative cooler. When using multiple evaporative coolers in close proximity, be sure to aim each evaporative cooler so the air flows complement each other to achieve maximum cooling capacity.

STARTING THE PUMP AND ADJUSTING THE WATER FLOW

Once the tank is full of water, moving the pump switch to the "ON" position on the control panel will turn on the pump. When initially turning on the pump, the level in the water tank will drop suddenly and restart the flow of supply water. This is a normal condition, as the evaporative media requires a large amount of water for proper wetting.

New Kuul Comfort™ evaporative media will require an initial 'breaking-in' period. This period is required for the media to begin readily absorbing water. It may require up to a week to achieve maximum efficiency.

It is important to ensure that the water flow to the evaporative media is properly adjusted when first starting the water flow in the evaporative cooler. Increasing the flow using the water adjustment valve makes this adjustment. Proper water adjustment should leave the evaporative media saturated with water, but not flooded. Evaporative media should appear wet.

When turning the evaporative cooler off at the end of the day or week, the pump should be turned off about 15 minutes before the fan to allow the Kuul evaporative media to dry.

STARTING THE PORTACOOOL EVAPORATIVE COOLER

Start the fan by turning the fan switch to the desired speed on the control panel. Before starting, make sure casters are in locked position.

MAINTENANCE

While the rugged, corrosion-resistant construction ensures low maintenance will be required, keeping your evaporative cooler clean will ensure it stays in peak operating condition.

DAILY MAINTENANCE

The pump should be turned off approximately 15 minutes before the fan is turned off, which allows the Kuul® evaporative media to dry. Ensuring your Kuul evaporative media is dry at the end of the day not only extends its life, it also helps control the growth of mildew, mold, bacteria and other odor-causing elements.

WEEKLY MAINTENANCE

Your Portacool portable evaporative cooler should be shut down, disconnected from power and the tank should be drained once a week by removing the drain cap. Once the tank is drained and the power disconnected, the Kuul evaporative media may be removed to allow cleaning of the tank, where dust may collect over time. Replace Kuul evaporative media in correct airflow direction, referring to the label on the Kuul evaporative media.

If conditions, such as hard water, warrant, Portacool Hard Water Treatment™ can be purchased at website or from authorized distributors. Portacool Hard Water Treatment keeps minerals present in your water in solution and off of your Kuul evaporative media by changing the ionic structure of the particles. It can increase cooling efficiency, remove and inhibit scale building up, reduce equipment corrosion, and extend evaporative media life.

STORAGE

1. Drain all water from the tank and wipe the tank clean, ensuring the Kuul evaporative media and tank are dry.
2. Roll up the power cord and secure it to ensure it will not be rolled over, tripped over or caught in equipment.
3. Cover the evaporative cooler completely to prevent dust build-up and store in a dry area. This also helps to prevent damage to the Kuul evaporative media.

TROUBLESHOOT

Turn off all power to the evaporative cooler before attempting to troubleshoot any of the following symptoms. For problems not listed, please contact Customer Service.

SYMPTOM

POSSIBLE CAUSES

REMEDY

Evaporative cooler fails to start or deliver air

1. No electricity to the evaporative cooler
 - A. Circuit breaker tripped
 - B. GFCI tripped
 - C. Power unplugged or damaged
2. Motor overheated and/or frozen

1. Check power
 - A. Reset breaker*
 - B. Reset GFCI/ELCI**
 - C. Plug in cord(s) or replace if damaged
2. Replace motor

Evaporative cooler starts, but air delivery is inadequate

1. Kuul evaporative media side of the evaporative cooler is too close to a wall
2. Fan motor failure
3. Capacitor failure

1. Move evaporative cooler at least three feet from the wall
2. Replace fan motor
3. Replace capacitor

Water draining from the evaporative cooler

1. Seat in float valve leaking
2. Drain plug not tight

1. Replace float valve
2. Tighten plug

Knocking, shaking, or rattling sounds

1. Loose parts
2. Fan blade rubbing shroud

1. Check and tighten where needed
2. Inspect and adjust, or replace fan blade

* If condition persists, call electrician

** See GFCI/ELCI section

TROUBLESHOOT

SYMPTOM

POSSIBLE CAUSES

REMEDY

Musty or unpleasant odor

1. Stale or stagnant water in tank
2. Kuul evaporative media is mildewed or clogged

1. Drain, flush and clean tank
2. Replace Kuul evaporative media

Water droplets in the air stream

1. Too much water delivered to Kuul evaporative media
2. Leaking hose

1. Make sure Kuul evaporative media is properly positioned in the frames and evaporative cooler is level
2. Tighten connection or replace hose

FAQ

Q. What assembly is required?

A. None. Portacool Jetstream evaporative coolers are ready to use right out of the box.

Q. How do I prepare my evaporative cooler for storage?

A. Drain the evaporative cooler, dry out the evaporative media, cover the evaporative cooler and store in a dry place.

Q. I just ran my evaporative cooler for the first time and there is an unpleasant odor.

A. Our unique design and manufacturing technique, together with our superior materials, enable our products to perform efficiently within a wide range of conditions. When installed correctly, our evaporative media products allow complete molecular evaporation of water ensuring a pure, clean stream of air. When new, it is possible that a small amount of aromatic molecules may evaporate along with the water molecules, which could be detected as a slight smell. This scent lessens in time. Our product does not, in any way, allow harmful chemicals to be evaporated into the air stream.

Q. My evaporative cooler is not putting out any cool air.

A. First, make sure the water source and electricity source are connected and working. Second, check to see if the Kuul evaporative media is damp. If not, adjust the water flow with the water adjustment valve. Third, make sure there is water in the tank. It should be allowed to fill before you turn the pump on.

Q. What is the best environment to produce the most cool air?

A. For optimum performance, the temperature should be 85° F or higher and the relative humidity should be below 75%. However, Portacool evaporative coolers will reduce the temperature in almost any environment, making it more comfortable.

Q. How often should my Kuul Comfort™ evaporative media be replaced?

A. Depending on the quality of maintenance and frequency of use, Kuul Comfort evaporative media typically last up to five years. However, should you have any questions about the life of the media in your Portacool® portable evaporative cooler, please call our Customer Service department for more detailed information.

Q. What is the difference between evaporative cooling and misting systems?

A. Misting systems spray a shower of water into the air that will collect on people, objects, equipment, floors, etc. Portacool evaporative coolers use the process of evaporation to produce cooler air, but do not produce a mist.

Q. Where can I buy replacement parts?

A. Replacement parts may be purchased online at website or from any Portacool distributor. You may also contact Portacool Customer Service department for additional assistance.

Q. What is the amount of moisture produced?

A. An increase in humidity of approximately two to five percent is produced, depending on the temperature and humidity of the environment. This increase is not noticeable in a ventilated area where the air produced by the cooler is exhausted.

Q. How long will the water supply last in the tank?

A. With no direct water source available, the water will evaporate in a filled tank within two to 10 hours of operation, depending on the water capacity of the evaporative cooler, ambient conditions, temperature and humidity. A water source for refilling the tank is recommended by the manufacturer.

HOW TO REPLACE YOUR KUUL COMFORT™ EVAPORATIVE MEDIA

Step 1

Be sure to unplug your Portacool portable evaporative cooler before doing any maintenance. Lock the casters to keep your evaporative cooler from moving while you are working. Remove the flap and Kuul Comfort™ evaporative media from the evaporative cooler. The flap is attached at the top of the evaporative cooler with screws. Remove the screws and set the flap aside.

Step 2

All Kuul Comfort evaporative media must be removed before accessing the inside of the evaporative cooler. Remove the center set of Kuul Comfort evaporative media first by grasping at the top and tilting it out and away from the evaporative cooler. While tilting the Kuul Comfort evaporative media out, lift it up and out of the evaporative cooler.

Step 3

Remove remaining Kuul Comfort evaporative media in the same manner. Set aside in a safe place to prevent damage while out of the evaporative cooler. Once all the Kuul Comfort evaporative media has been removed, you should have access to the inside of the evaporative cooler and internal components.

Step 4

Replace your Kuul Comfort evaporative media by beginning on the outer edges and working towards the center. Pay close attention to the stickers on the evaporative media the arrow sticker should point up and inward. Replace the evaporative media flap, securing it with screws.

PARTS

PRODUCTS SOLD IN THE UNITED STATES, CANADA AND MEXICO

	220	230	240	250	260	270
MOTOR	PARMTRJ2200A	PARMTRJ2300A	PARMTRJ2400A	PARMTRJ2500A	PARMTRJ2600A	PARMTRJ2700A
PUMP	PARPMP00020A	PARPMP00020A	PARPMPJ2400A	PARPMPJ2500A	PARPMPJ2600A	PARPMPJ2700A
MEDIA	PARKULJ22000	PARKULJ23000	PARKULJ24000	PARKULJ25000	PARKULJ26000	PARKULJ27000
CONTROLS	PARCTLJ22000	PARCTLJ23000	PARCTLJ24000	PARCTLJ25000	PARCTLJ26000	PARCTLJ27000
COVER	PARCVRJ22000	PARCVRJ23000	PARCVRJ24000	PARCVRJ25000	PARCVRJ26000	PARCVRJ27000
HARD WATER TREATMENT	PARPACHWTB00	PARPACHWTB00	PARPACHWTB00	PARPACHWTB00	PARPACHWTB00	PARPACHWTB00

Check out the collection of HVAC and refrigeration we offer.